

EPSON PRODUCT SUPPORT BULLETIN

Date: 3/25/04

Originator: rws

Bulletin #: PSB.2004.03.006

Authorization: 

Reference: TE03-461 Rev.A, epson10997, TE03-620Rev.A, TE03-620 Rev.B

Total Pages: 1

Product: Stylus Pro 5500, 7600DYE, 7600UCM, 9600DYE, 9600UCM, 10000DYE, 10000CF, 10600UCM

Subject: Driver Plug-in Up-Date v1.0cE for the Epson MAC OS-X Printer Driver

This bulletin was created to inform you of a Epson Driver Plug-in up-date for the **Stylus Pro 5500, 7600DYE, 7600UCM, 9600DYE, 9600UCM, 10000DYE, 10000CF, 10600UCM** standard Mac OS X Epson printer drivers released prior to January 01, 2004.

Description of Change:

This change updates the standard **Epson driver interface plug-ins ONLY** that were included as part of the Epson MAC OS X driver released prior to January 01, 2004, and supersedes the epson10997 connectivity Plug-in up-date previously posted.

NOTE: *Should you need to reinstall the Epson Printer Driver after this up-date, you will need to re-apply the update again afterward to update the drivers standard plug-ins.*

Reason:

This Update stabilizes Epson driver Interface communications during printing and corrects Epson Status Monitor functions for the following Professional Graphics printer driver plug-ins and upgrades their versions to: FireWire v1.81, USB v1.81, TCPIP v1.81.

NOTE: *In addition we recommend you upgrade your MAC OS-X operating system to the most current version.*

How Do I Get The Up-Date?

The up-date is available for download on our WEB Site: **www.epson.com** from the **MAC Drivers & Downloads** section for each of the printers listed. The file name is **epson11054**.

EPSON PRODUCT SUPPORT BULLETIN

Date:	11/8/04	Originator:	RB, CH, JD, SA
PSB #:	PSB.2004.03.001C	Authorization:	<i>[Signature]</i>
Reference:	PSB.2004.03.001A	Total Pages:	19
Product(s):	EPSON Stylus Color 3000, Stylus Pro 4000, 5000, 5500, 7000 Series, 7600 Series, 9000 Series, 9600 Series, 10000 Series, and 10600 Series		
Subject:	Maximum Printable Area Limits for the EPSON Professional Graphic Printer line.		

This bulletin was created to inform you of the maximum custom page sizes allowable for EPSON Professional Graphic products. The tables below show the maximum page sizes allowable for the EPSON Professional Graphics printer line (Desktop and Large Format). Although this document is meant as a guideline for the maximum page size allowable for each printer, it does not include printable area (margin) information. Please refer to your user guide for additional information regarding the printable area (margins) for your particular printer. There are 3 aspects that effect how long of a page your printer can output. Those 3 items are:

1. Operating System.
2. Driver Specification.
3. Software application(s) being used.

Maximum custom page size allowable per operating system (for Epson standard driver):

	Stylus Color 3000	Stylus Pro 4000	Stylus Pro 5000	Stylus Pro 5500	Stylus Pro 7000	Stylus Pro 7500	Stylus Pro 7600	Stylus Pro 9000	Stylus Pro 9500	Stylus Pro 9600	Stylus Pro 10000 Series
Macintosh OS	44 in.	44 in.	44 in.	44 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.
Macintosh OS X*	44 in.	44 in.	N/A	44 in.	N/A	N/A	90.5 in.	N/A	N/A	90.5 in.	90.5 in.
Win 9x/Me	44 in.	44 in.	44 in.	44 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.
Win NT 4.0/2000/XP	44 in.	44 in.	44 in.	44 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.	90.5 in.

Print jobs being sent through the Epson standard print driver should be in the RGB format in order for color management to be utilized properly.

* Macintosh OS X allows you to create any paper size regardless of printer driver's limitations. Exceeding these limitations will result in your image being cropped and printed at 8.5 x 11.

Maximum custom page size allowable for EPSON PostScript options (PPD):

	Stylus Color 3000	Stylus Pro 4000	Stylus Pro 5000	Stylus Pro 5500	Stylus Pro 7000	Stylus Pro 7500	Stylus Pro 7600	Stylus Pro 9000	Stylus Pro 9500	Stylus Pro 9600	Stylus Pro 10000 Series
EPSON Stylus RIP	44 in.	N/A	44 in.	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
EPSON Fiery RIP Station	N/A	N/A	44 in.	N/A	See NOTE 1	See NOTE 1	N/A	See NOTE 1	See NOTE 1	N/A	N/A
EPSON Fiery Spark Designer (Mac)	N/A	N/A	N/A	44 in.	N/A	N/A	N/A	N/A	N/A	N/A	N/A
EPSON Fiery Spark Professional	N/A	N/A	N/A	44 in.	N/A	N/A	See NOTE1	N/A	N/A	See NOTE1	See NOTE 1
EPSON ColorBurst RIP	N/A	See NOTE1	N/A	44 in.	N/A	N/A	See NOTE1	N/A	N/A	See NOTE1	See NOTE 1

Print jobs being sent through the Epson PostScript driver can be either RGB or CMYK format. Settings in the RIP will determine how color management is used.

Maximum page size allowable from software applications:

	Stylus Color 3000	Stylus Pro 4000	Stylus Pro 5000	Stylus Pro 5500	Stylus Pro 7000	Stylus Pro 7500	Stylus Pro 7600	Stylus Pro 9000	Stylus Pro 9500	Stylus Pro 9600	Stylus Pro 10000 Series
Adobe Photoshop 5.x/6.x/7.x/	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2
Adobe Photoshop CS	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2	See NOTE 2
*Adobe Illustrator 8.x/9.x	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.
*Adobe Illustrator CS	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.	227 in.
QuarkXPress 4.x/5.x/6	48 in.	48 in.	48 in.	48 in.	48 in.	48 in.	48 in.	48 in.	48 in.	48 in.	48 in.
*CorelDRAW 8.x/9.x/10.x/11.x	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.	1,800 in.

* These applications allow for tiling of print pages, therefore allowing you to print beyond the printers maximum page length limit and print to the applications limits. The printer driver must be set for Roll Paper (Banner) mode so that page breaks at the printer's maximum page length do not occur (in essence gives you a 0 margin for the bottom of the page). The Stylus Pro 5000/5500 however will give a slight page break at the 44 inch limit as these printers do not support banner mode. Also, printing certain elements from these applications may not utilize color management correctly/properly and may produce output color that is not expected.

NOTE 1:

- a. Under Win 9x/Me, the PPD limit is 129 inches.
- b. Under Windows NT, 2000 and XP, the PPD limit is 1771.6 inches (SP7000/9000 Series) and 1800 inches (SP7600/9600/10000 Series).
- c. Under Mac OSX/8.x/9.x, the PPD limit is 273.06 inches.

NOTE 2:

Adobe Photoshop has a pixel limitation of 30,000 pixels, which means that a document created @ 300ppi can only reach a maximum page size of 100 inches (H and V). When sending jobs to the printer via the standard non-PostScript print driver, Photoshop looks at the input resolution of the printer driver and adjusts the page size accordingly. All Epson large format printers use 360dpi as the input resolution (this is the resolution data is rasterized at), therefore when printing from Photoshop, the maximum page length you will be able to output to any Epson large format printer using the standard Epson print driver would be 83.33 inches (30,000 pixels / 360dpi). As for the Epson desktop products, they rasterize data at 720dpi, therefore the maximum page length obtainable with the standard print driver would be 41.67 inches (30,000 pixels / 720dpi).

Also, under Photoshop 5.x/6.x for the Macintosh and Photoshop 6.x for the PC, the job will end up clipped if it is over the 83.3inch printer page limit. In Photoshop CS, the print job will end up clipped if it is over the 86inch printer page limit; however it will allow you to create a custom paper size of 91inches max. If you are using Photoshop 5.x for the PC, the print job will actually be truncated to fit within the printable area of the printer. Be advised that you may not get a page size error. It may be useful to enable the "print preview" function of your printer driver (if available) so that you do not waste unnecessary media.

The only options for printing beyond the limitations is to save the file and print via an application that does not have the 30,000 pixel limit (may lose color management functions) or print the file through a PostScript RIP (which will allow for longer pages).

UPDATE: Photoshop CS allows for a maximum Pixel limit of 300,000 x 300,000 (this would create a 251.5 GB file!!) This allows Photoshop to have a print dimension of 4166.666 x 4166.666 at 72 ppi (Pixels per Inch). At 360 ppi, your max print size would be 833.333 x 833.333. You can still only print 44 x 90.5" Photoshop CS at this point exceeds the capability of our printers.

For Windows Users, if you encounter partial/incomplete prints while having Finest Detail enabled, please disable this setting. It is recommended for low resolution text and line art to sharpen their edges. For photos, this may create a massive print file that is too large for the printer driver to process correctly.

The following examples show how to setup banner printing from Adobe Illustrator 8.x/9.x and CorelDRAW 9 from the PC platform. The Macintosh versions of these applications should be very similar in function. Please refer to your software documentation for additional assistance.


Adobe Illustrator CS:

In this example, we are creating a banner, which is 227 inches (Illustrators max. page setup).

NOTE:


Mac O/S 10.3.3 system is used in this example. Windows versions of this application should be very similar in functionality. Please refer to your software documentation for additional assistance. In this example, a “20 inches wide X 180 inches high” document is created.

1. Click on File and New, set up the width and height (sample shows 20 W x 180 H), then click OK.

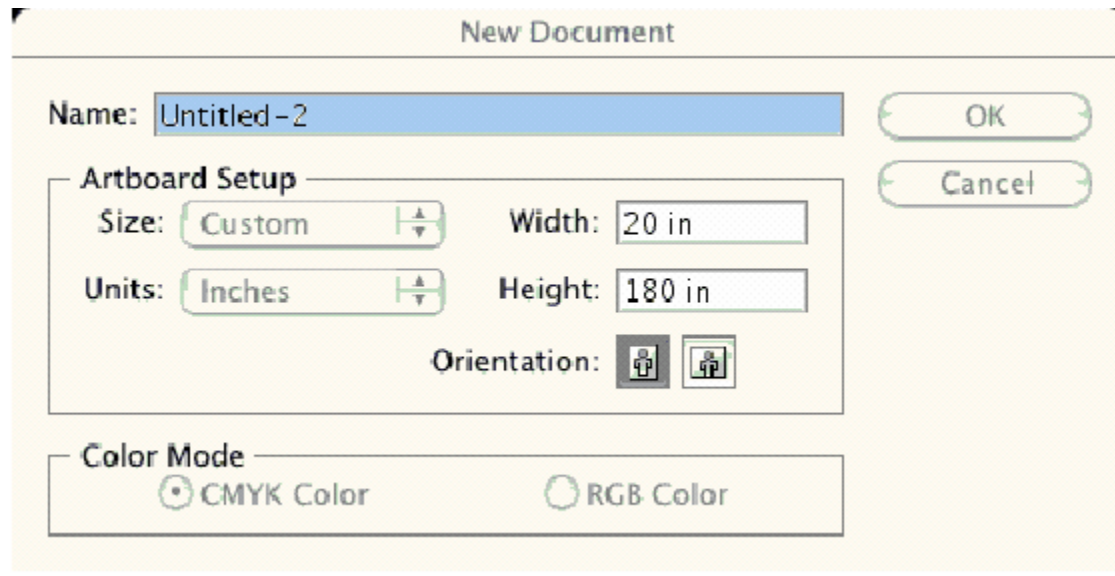


2. Insert the image you want to print and stretch it until it covers the whole page.

3. Click on File, Print, click Setup, under Tiling click on the drop down arrow, select **Tile Full**
4. **Pages** and click the **Printer** button.

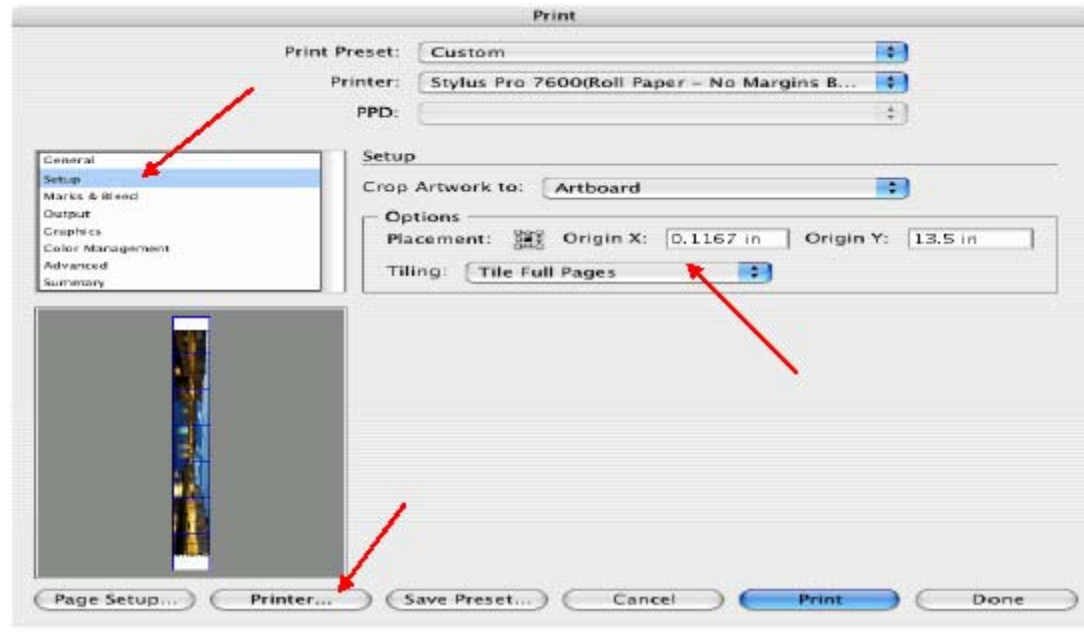

5. When the printer setup window comes up, select your printer name and set the **Roll Paper Options** to:
Roll Paper Banner
Roll Paper Banner – No Margin (if printing no margins)
6. In the **Copies and Pages** section, click on the drop down arrow, select **Roll Paper Option**. Uncheck **Auto Cut** then check **Save Roll Paper**.

7. Then click on **Print**. This will bring you back to the **Print** window.

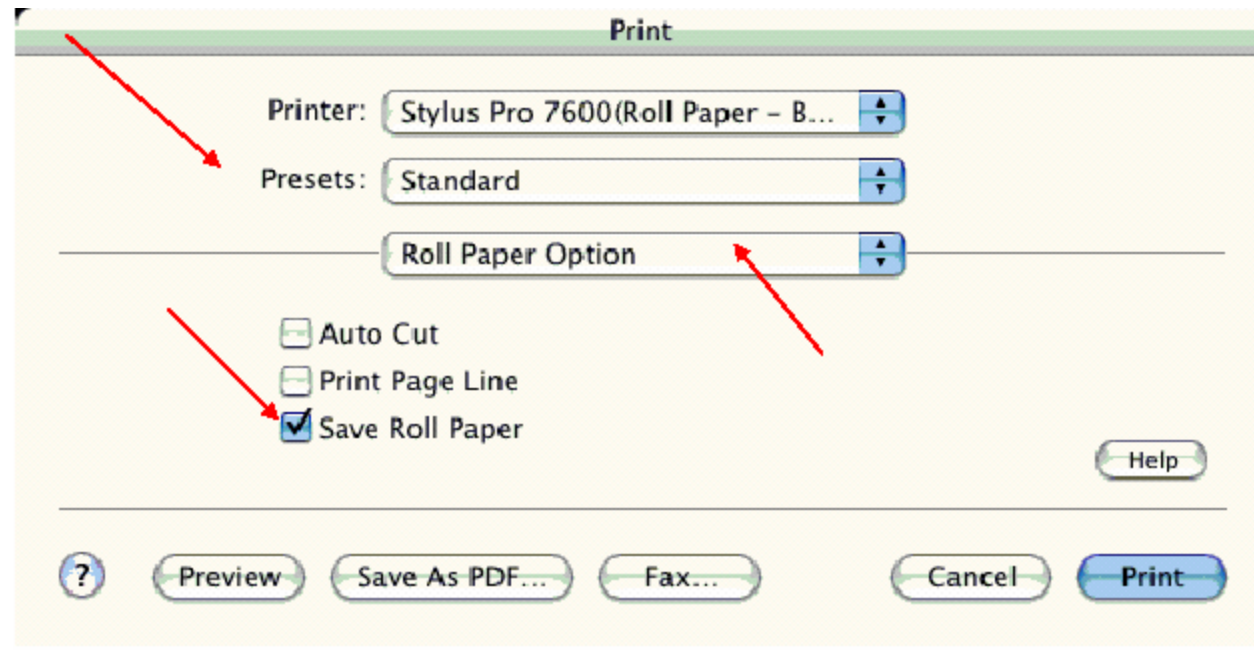

8. This time click on **Page Setup**, you see the following screen, just click on **Continue** (If you don't want to see the window again, place a check mark on **Don't Show Again** box).




9. When **Page Setup** is open, click on the down arrow for **Custom Paper Size**.


NOTE:

When creating the custom page size, divide the banner size by a value that will make it less than the printer maximum custom page size (90.5 inches). In this example we take $(180/2 = 90)$, therefore the custom page size created would be 20x90 (inches).

10. Click on **New**, name the custom size (i.e. 20 x 180 in this example), under **Paper Size** type in 20 inches for the width and 90 inches for the height, margins should be set to zero (0). Click on **Save**. Click on the down arrow again in the **Custom Paper Size** and select **Page Attributes**.

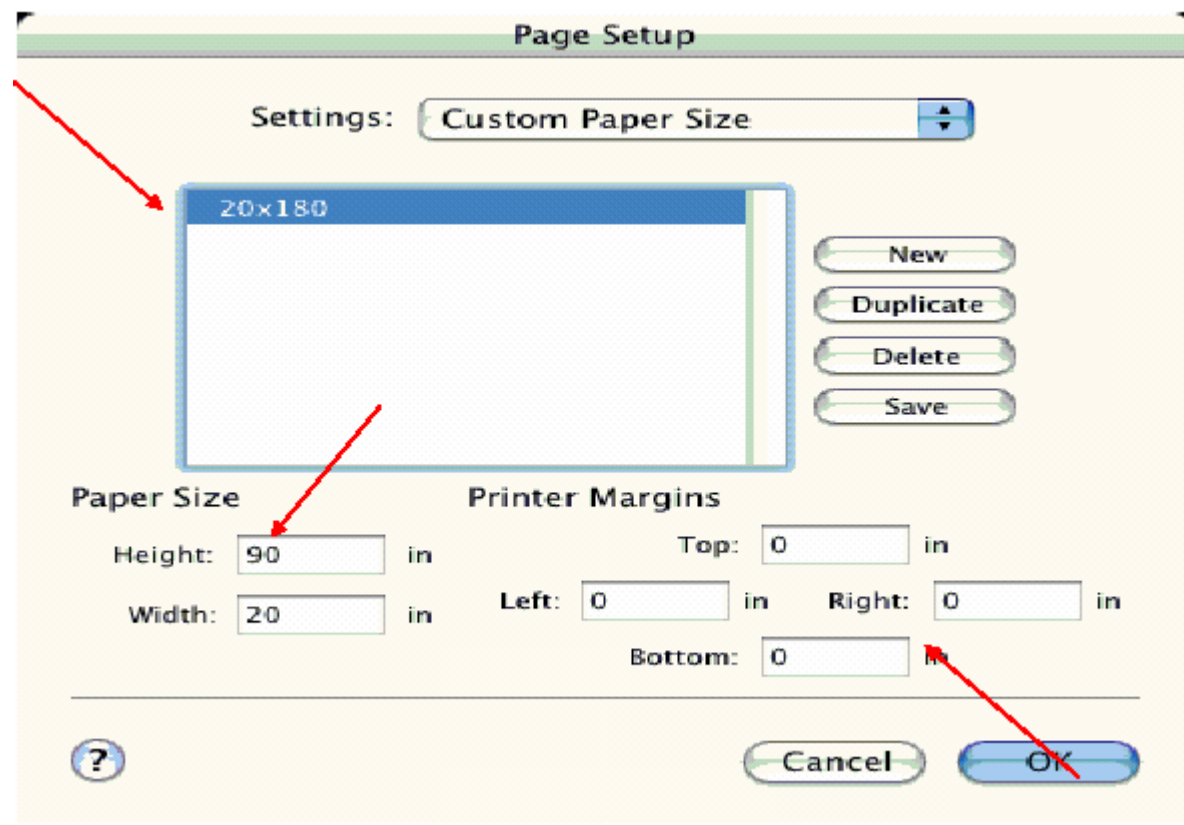


11. Under **Paper Size**, click on the drop down arrow and select the custom paper size you created (i.e. 20 X 180) orientation is set to portrait mode. Then click **OK**.

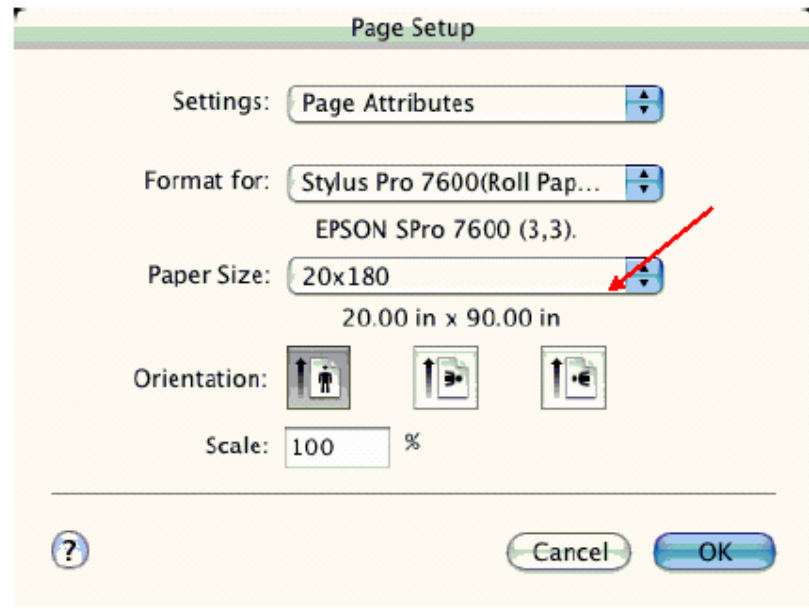

12. In the **Print** windows the preview pane will show 2 grids or pages. This indicates that a full image is tiled.

13. Click on **General**, then click the square on **Reverse Order**.

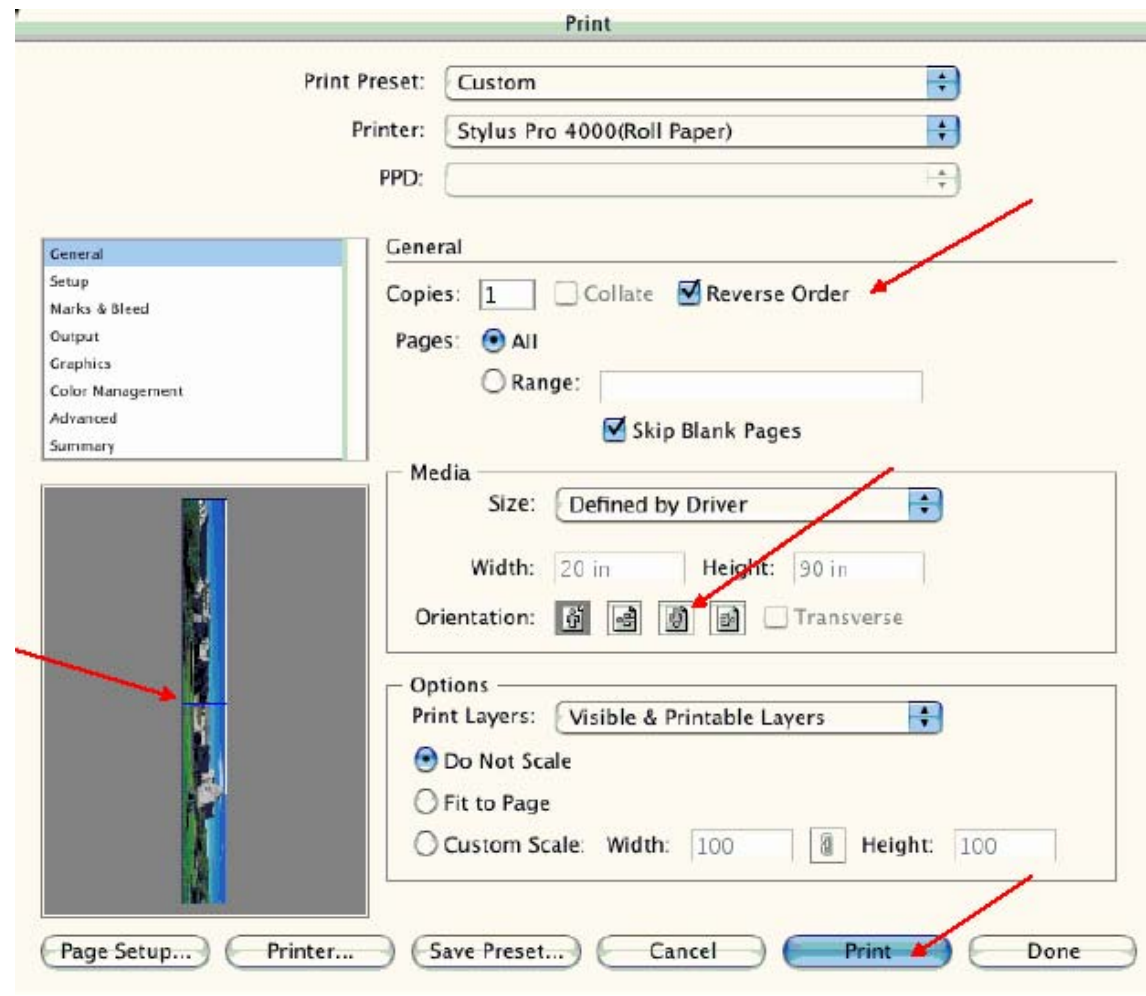

4. Click on **Print**.

NOTE 1: When enabled, the first page will be printed first, instead of the last page first. Or Change the orientation to “Reverse”, then you don’t have to check the “Reverse Order”.


NOTE 2: Always select the custom page size last, if not, it will default to other paper sizes.

NOTE 3: Before printing a large document, make sure you have enough ink to prevent getting an Ink Out message, causing the print job to stop and not completing the entire print.

Adobe Illustrator 8.x/9.x:



In this example, we are creating a banner, which is 227 inches (Illustrators max. page setup).

1. Launch Illustrator and open or place your file in the page layout.
2. Click on **File**, then **Document Setup**. The following screen appears.
3. Uncheck **Use Print Setup**, enable **Tile Full Pages** and create the page size (in our example we used 44x227 inches).

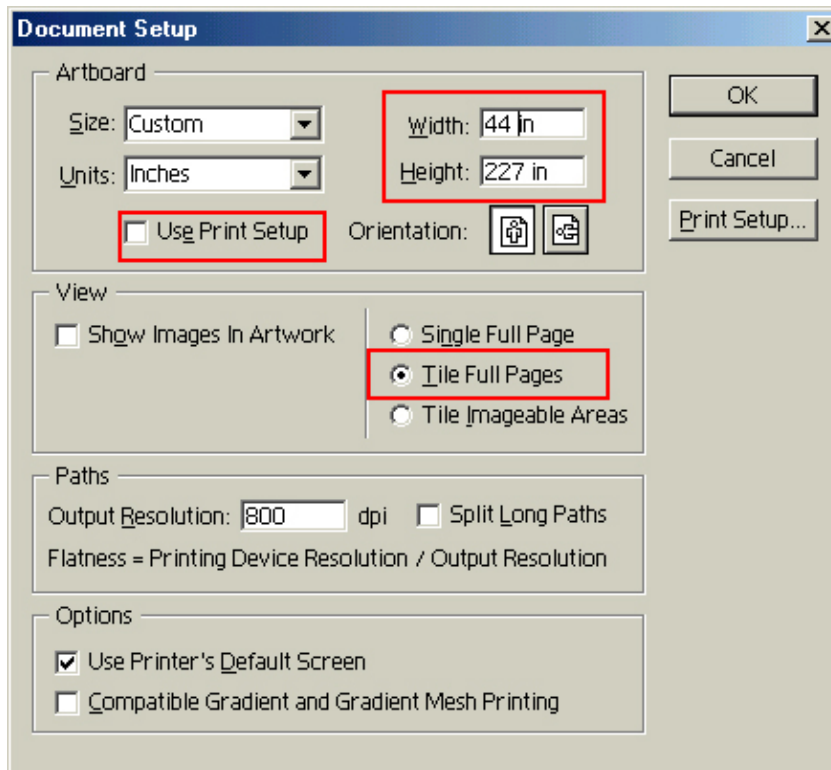

4. Click, **Print Setup**. This will bring up the print driver.


5. Click on the **Paper Tab**. The following appears.

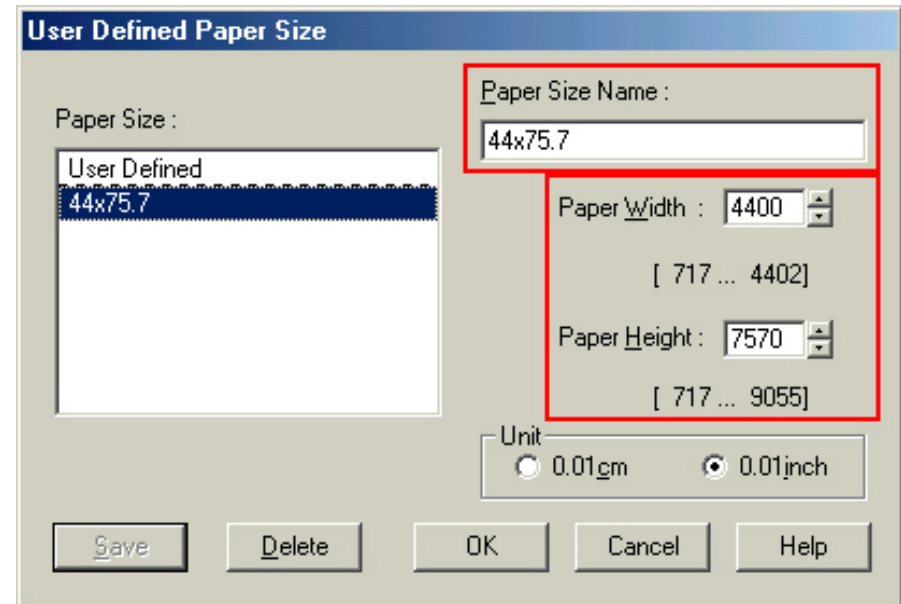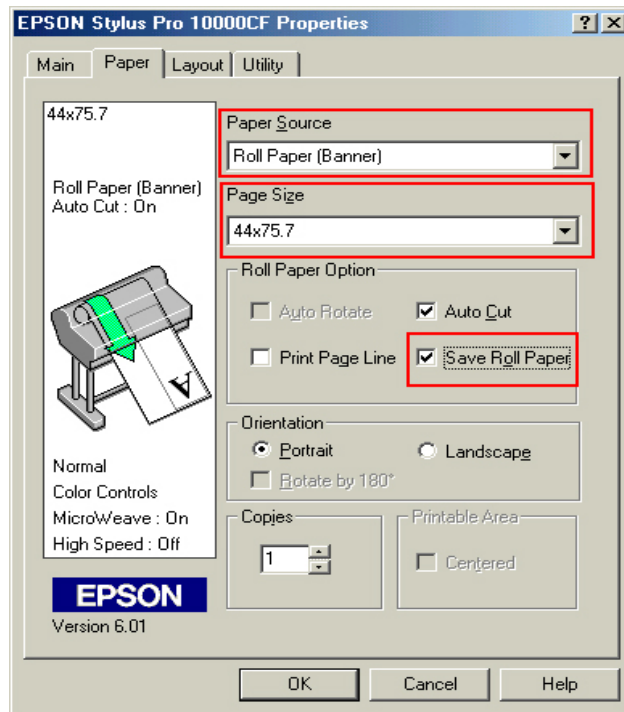

6. Set the **Paper Source** to **Roll Paper (Banner)** and also enable **Save Roll Paper**.

7. When creating the custom page size, divide the banner size by a value that will make it less than the printer maximum custom page size. In this example we take ($227/3 = 75.7$), therefore the custom page size created would be 44x75.7 inches. The reason for this is to save media.

8. After setting the custom page size and other driver settings (media type, resolution, etc.), click **OK**. This will bring you back to the document setup. Now double-click the “Page” tool.

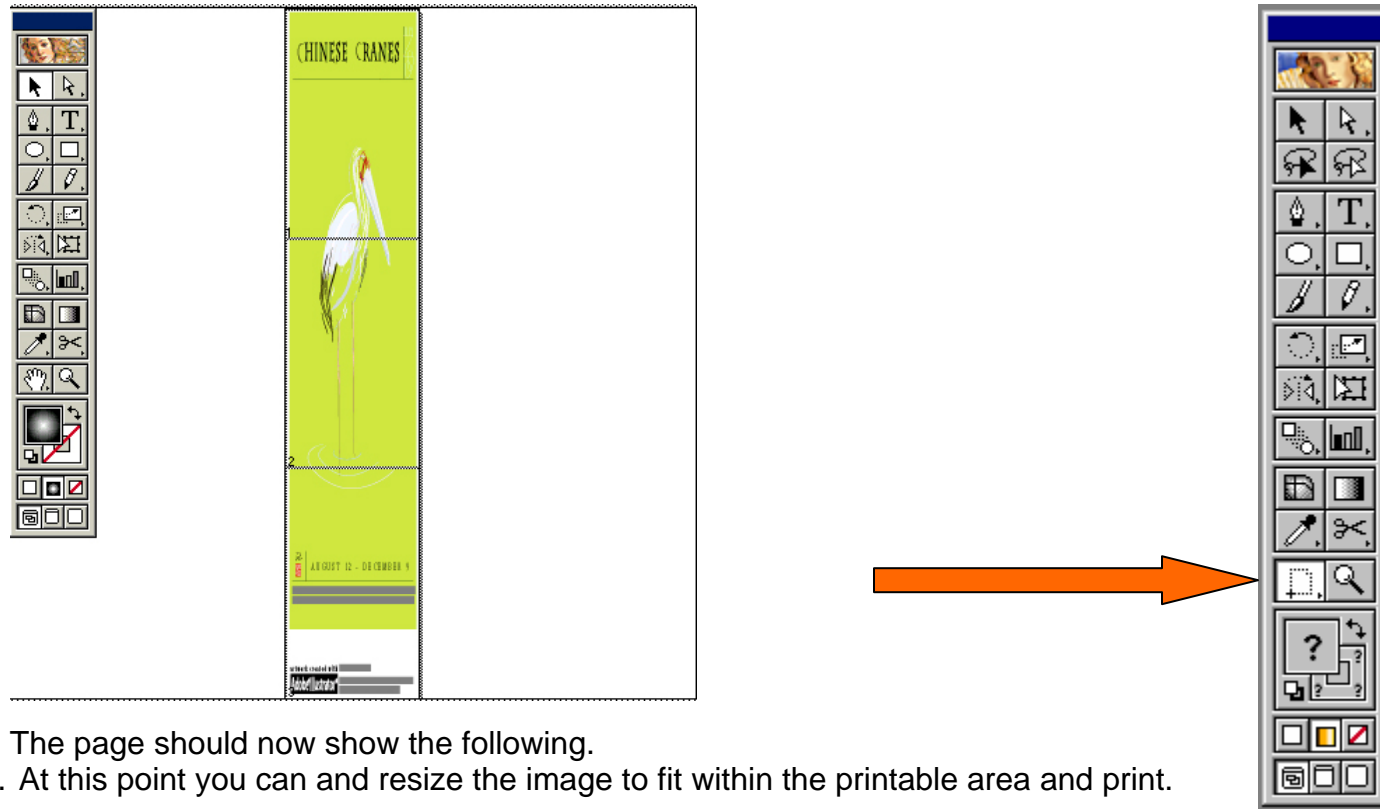


9. The page should now show the following.
10. At this point you can and resize the image to fit within the printable area and print.

CorelDRAW:


In this example, a banner is created at 227 inches.

1. Launch CorelDRAW and open or place an image in your page layout.
2. Adjust the page size and image for the document as shown in the following image.

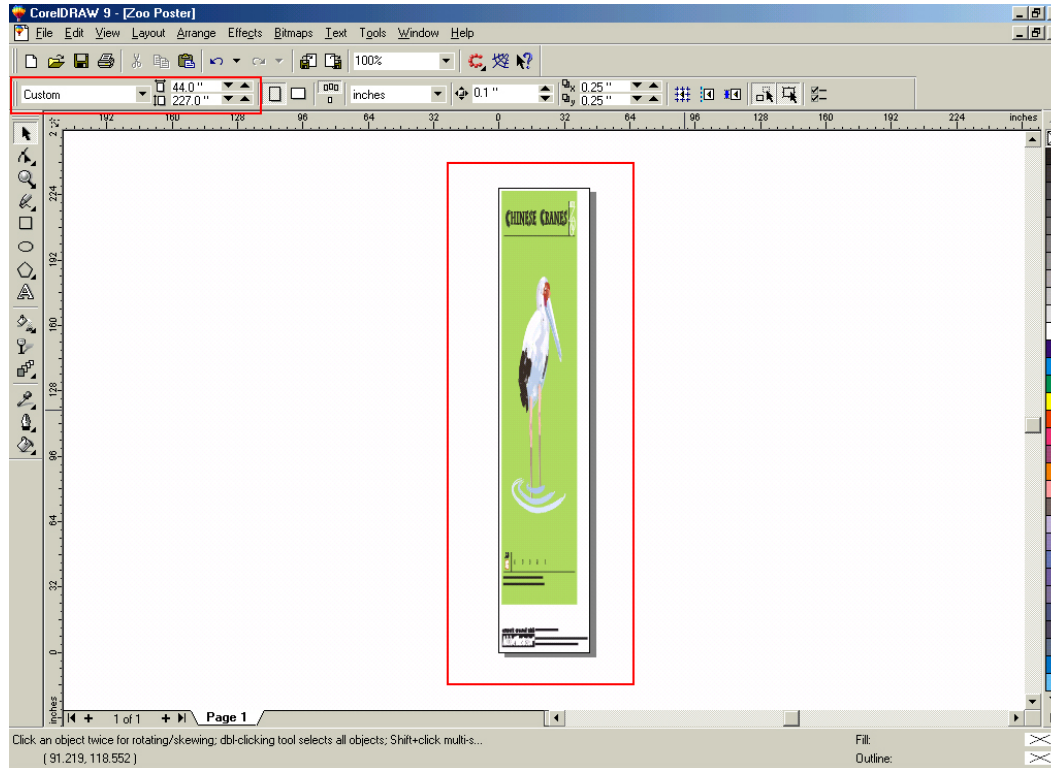


3. Click on **File** and **Print Setup**.

4. Click on the **Paper Tab**. The following appears.

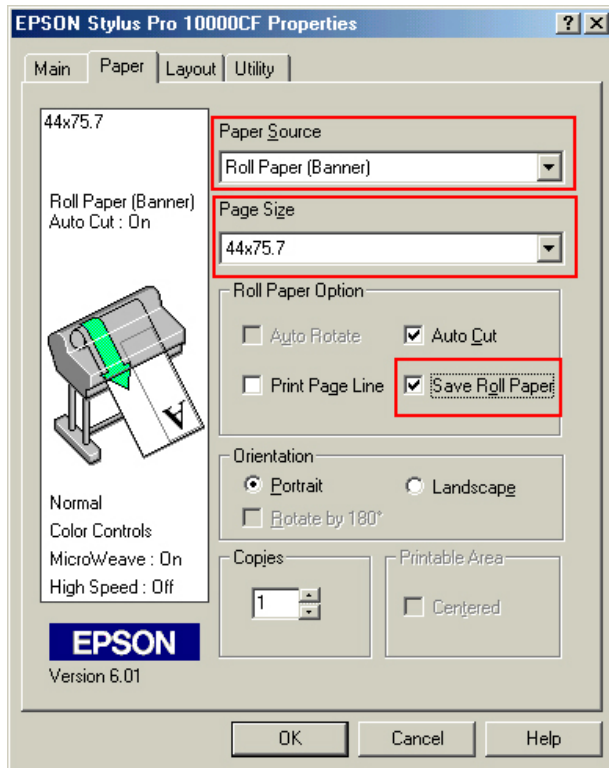


5. Set the **Paper Source** to **Roll Paper (Banner)** and also enable **Save Roll Paper**.

6. When creating the custom page size, divide the banner size by a value that will make it less than the printer maximum custom page size. In this example we take $(227/3 = 75.7)$, therefore the custom page size created would be 44x75.7 inches. The reason for this is to save media.

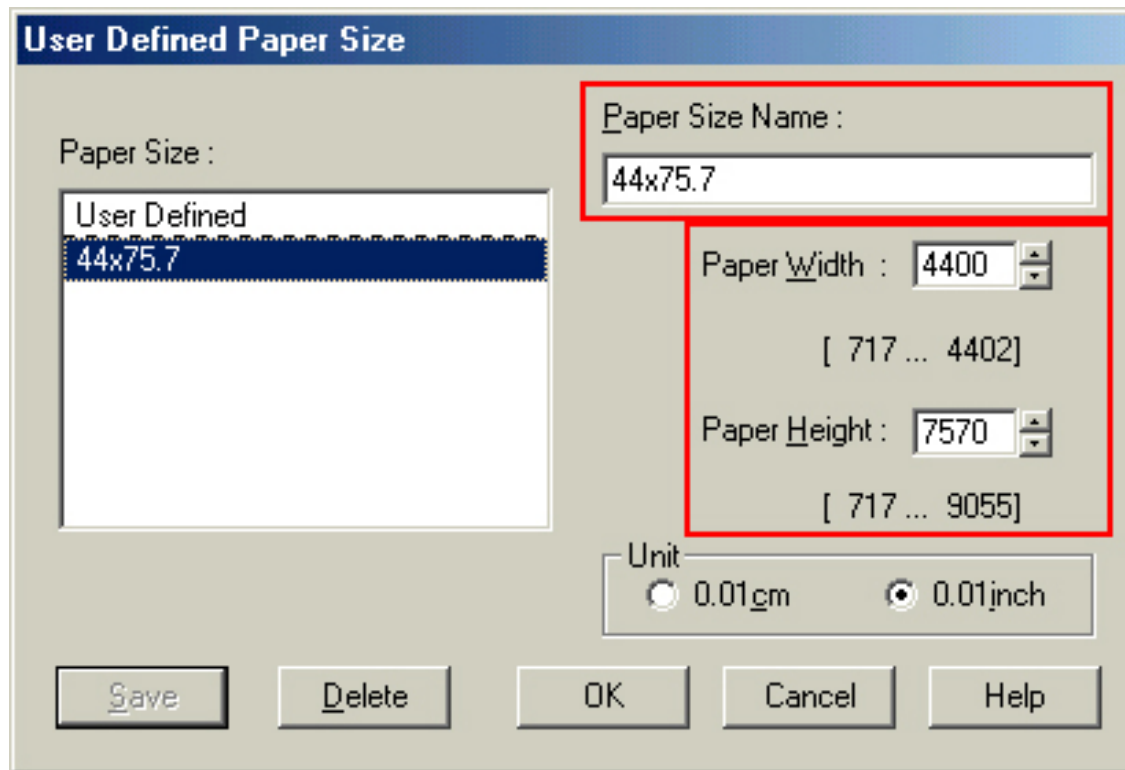


7. After setting the custom page size and other driver settings (media type, resolution, etc.), click **OK**. This will bring you back to the document.

8. At this point, click **File** then **Print**. CorelDRAW will then run a pre-flight check and will show the following window.

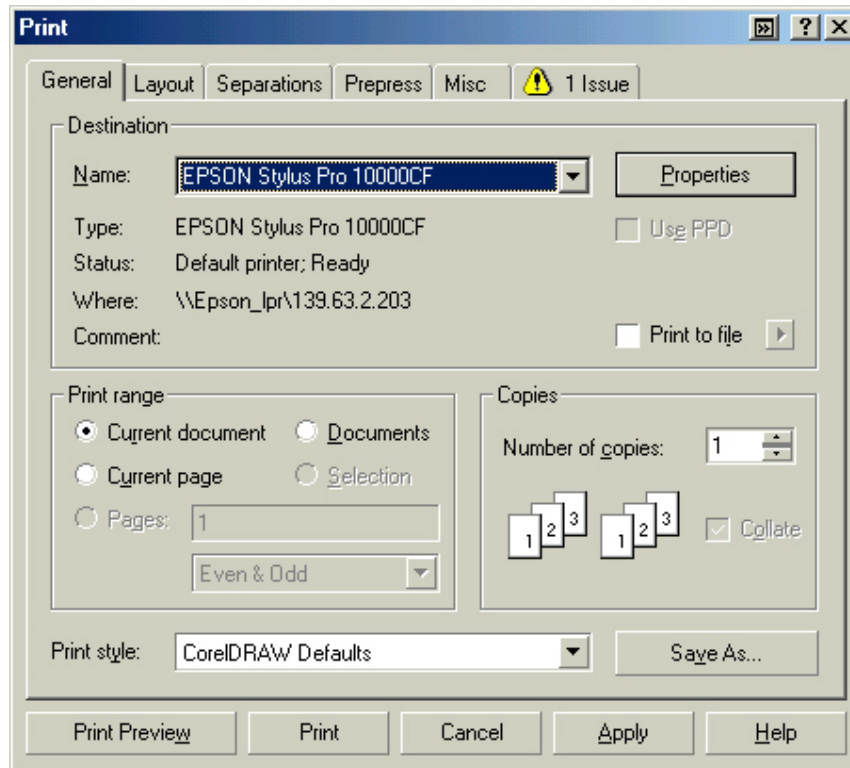

9. Click on the **Layout Tab** and enable **Print Tiled Pages** and set any additional parameters as you see fit.

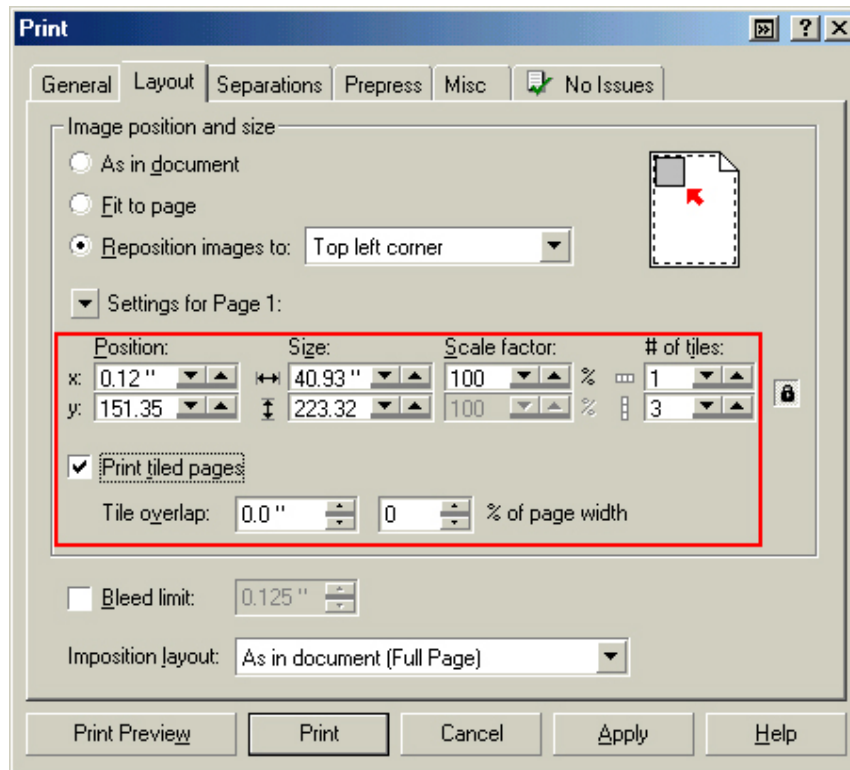

10. At this point you could check other tab settings (if necessary) and click **Print Preview** (recommended) if you want to see how the file will be printed or **Print** to output the file to your printer.

For all other applications, please refer to your software documentation for information on maximum custom page sizes for documents, banners or tiling prints.

EPSON PRODUCT SUPPORT BULLETIN

Date: 1/23/04

Originator: rws

Bulletin #: PSB.2004.01.001

Authorization: 

Reference: TE03-461 Rev.A

Total Pages: 1

Product: Stylus Pro 5500, 7600DYE, 7600UCM, 9600DYE, 9600UCM, 10000DYE, 10000CF, 10600UCM

Subject: Connectivity Plug-in Update v1.0bE for the Epson MAC OS X Printer Driver

A connectivity plug-in update is available for the standard Epson MAC OS X printer drivers released prior to January 1, 2004. This update applies to these printers: **Stylus Pro 5500, 7600DYE, 7600UCM, 9600DYE, 9600UCM, 10000DYE, 10000CF, 10600UCM**

Reason For Update:

This update improves the stability of the drivers USB, Firewire and TCP/IP communication module plug-ins.

Note: *If you reinstall the Epson printer driver after you have updated the plug-ins, you must apply this plug-in update again, as reinstalling the driver overwrites and installs the older version plug-ins.*

The version of the updated plug-ins installed in the Epson Printers folder can be verified using Get Info:

FireWire	v1.72
USB	v1.72
TCP/IP	v1.75.

Note: *In addition we recommend that your MAC OS X operating system be at the most current version.*

How Do I Get The Update?

The update is available for download from www.epson.com. Select Drivers & Downloads, select your printer model, scroll to Macintosh Operating Systems, and download the update (filename epson10997).

EPSON PRODUCT SUPPORT BULLETIN

Date: 07/03/03

Originator: rws

Bulletin #: PSB.2003.05.001B

Authorization: 

Reference: NA

Total Pages: 12

Product: Stylus Pro 7600/9600/10000/10600

Subject: MAC OS X Driver Installation and Removal

INTRODUCTION:

This bulletin was created to inform you how to Install and or Remove the Epson Stylus Pro 7600, 9600, 10000 or 10600 inkjet printer driver on a Macintosh OS X system.

If this is a first time Epson Stylus Pro Macintosh OS X printer driver installation you will only need to follow the driver installation steps.



If you have previously installed the Epson Stylus Pro 7600, 9600, 10000 or 10600 inkjet printer driver on your computer you must first Remove the driver from your system prior to performing the driver installation, this insures a complete driver installation.


NOTE: Although this document references the Epson Stylus Pro 7600/9600 ALL Epson Stylus Pro series Macintosh OS X printer driver Installation and Removal steps follow the same instructions.

INSTALLING THE DRIVER


1. After the driver is downloaded to your desktop a new folder is created (example: **epson10673**). Please read the files in this folder as they provide additional information for installing or using the driver.
2. Click on the file with the **.DMG** file extension (example: **SP7600_1.6bE.dmg**) to create the printer driver installation package.
3. The printer driver installation package installer has a **.pkg** extension (example: **SPro7600_16b.pkg**) double click on the file to start the printer driver installation.




Prior to starting the installation it is recommended you copy the installation package (example: **SPro7600_16b.pkg**) to your hard drive. This will save you time should you wish to reinstall the driver in the future.

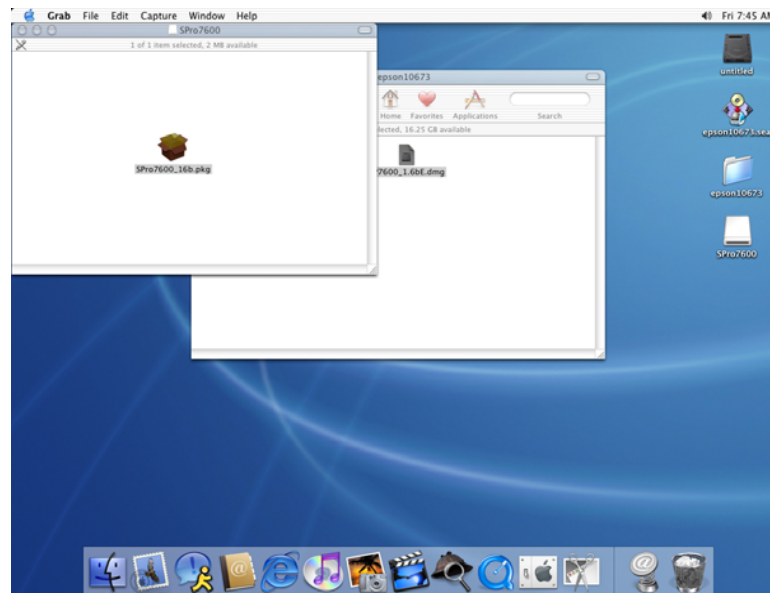

4. The installer requires your Macintosh password for Authentication. Enter your Password and click OK.
5. The Installer Introduction screen will be displayed, click CONTINUE.


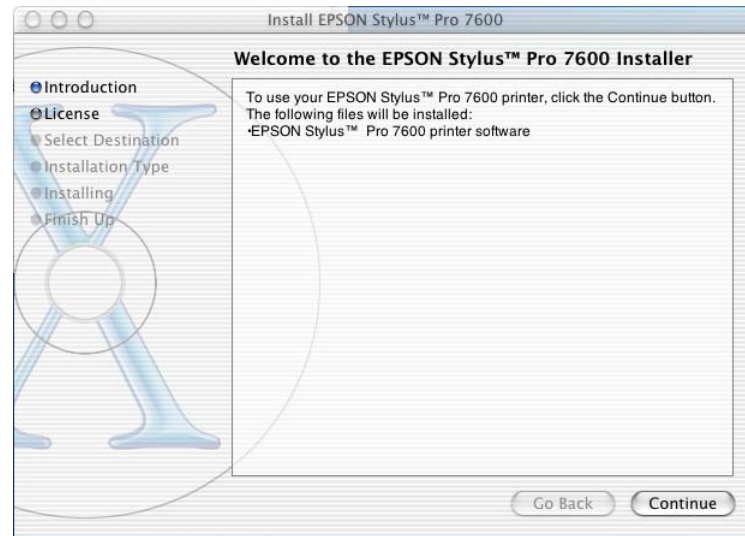


6. Read the License Agreement and click CONTINUE. You are asked to Agree or Disagree to the License Agreement click AGREE to continue the installation.

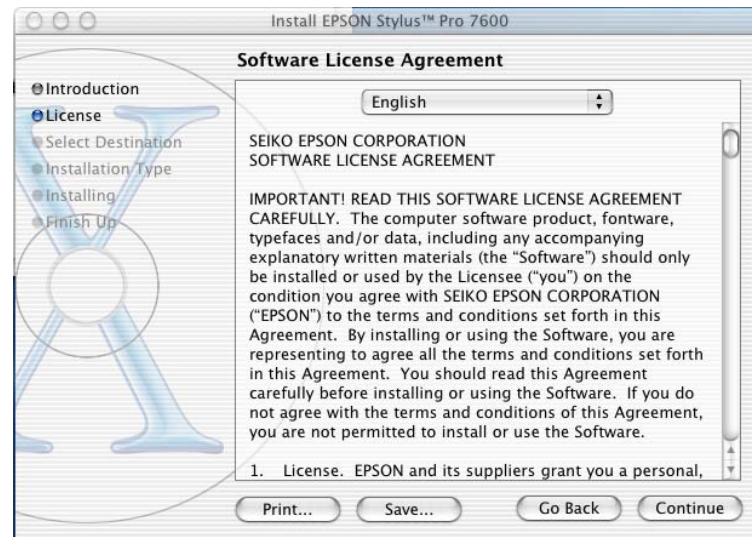

7. Select the Destination Disk (your OS X volume) to install the driver on by clicking on its icon, then click CONTINUE.


Installation Type is the next step "EASY INSTALL" is the default to perform the basic driver installation, to continue click INSTALL.

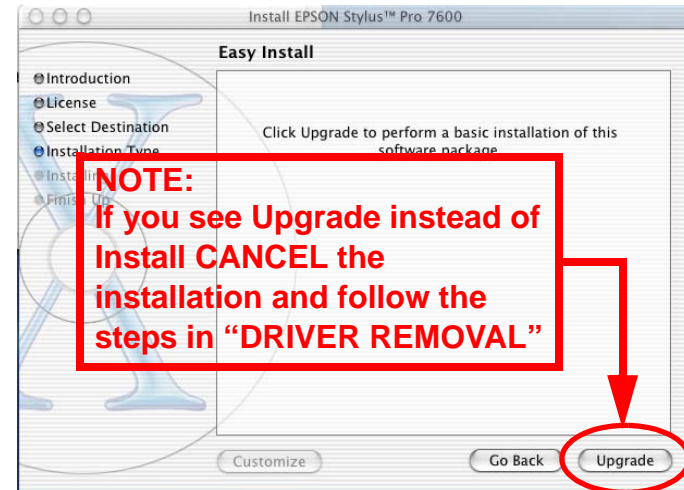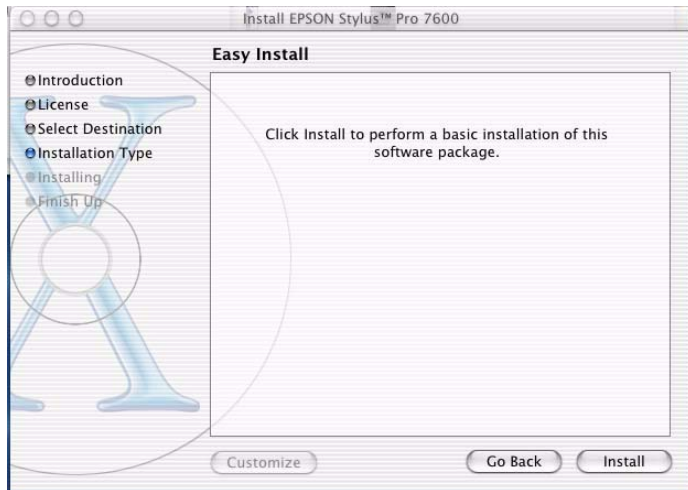

8. Next you see a notification screen to Restart your computer after the installation is completed, to continue click CONTINUE INSTALLATION. The Printer Driver will now be installed, a progress window is displayed during the installation.

9. The Printer Driver will now be installed, a progress window is displayed during the installation.

10. When the Printer Driver installation has completed the following window is displayed, click RESTART to Finish the installation.

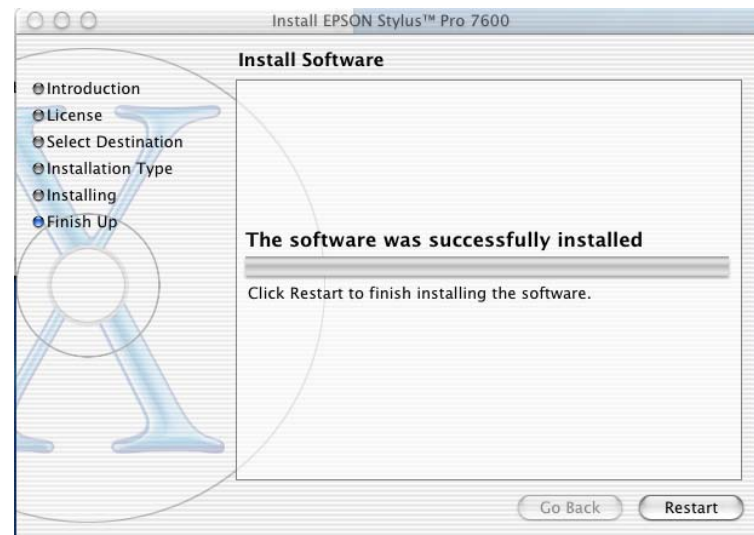

ADDING THE PRINTER TO PRINT CENTER


1. After the printer driver is installed you first need to register it with Print Center.
2. The Print Center Utility is located on your hard drive at the following location:
/Applications/Utilities/Print Center.




Copy the Print Center to the Short Cut Task Bar for ease of access.




3. You have Two ways to Add a printer. You can use the Add button or you can select Add Printer from the Printers drop down menu, click Add.

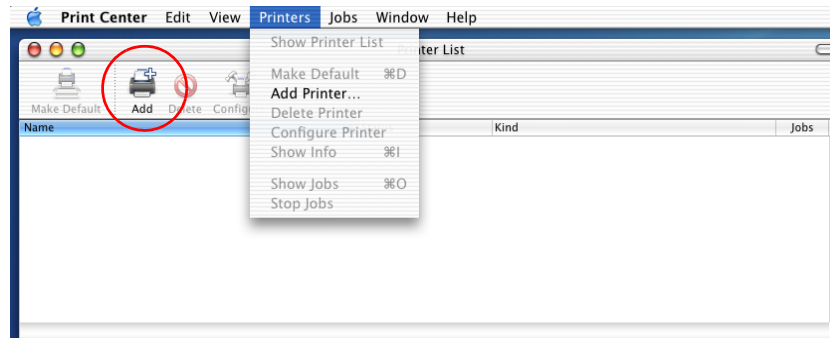


4. On the Add printer window you first need to select the Epson Interface Connection the printer is attached with:

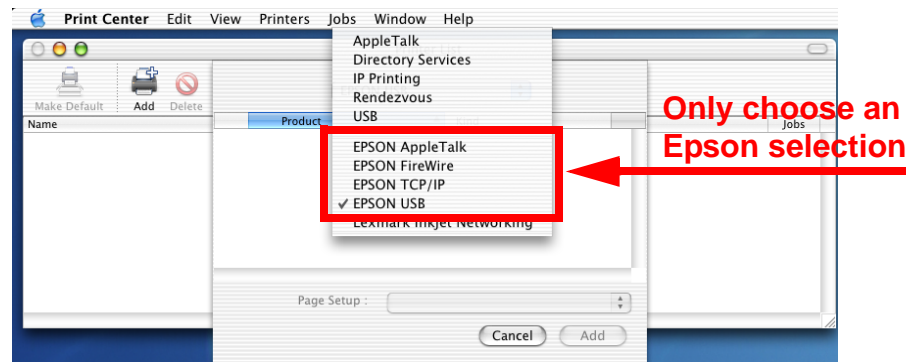


5. After you choose the Epson Interface Connection, the Print Center automatically searches the connection for printers. When the search completes:
 - 5.1 Select your printer from the list by clicking on it.
 - 5.2 Next select your Page Setup. Roll Paper is the default. If your work flow will include several of the choices they can be added individually, or to save time you can add all the choices by selecting All. The choices you make are print queues for the specific job types and will be listed in the Print Center.
 - 5.3 When you have completed making your Paper Setup choices click Add.

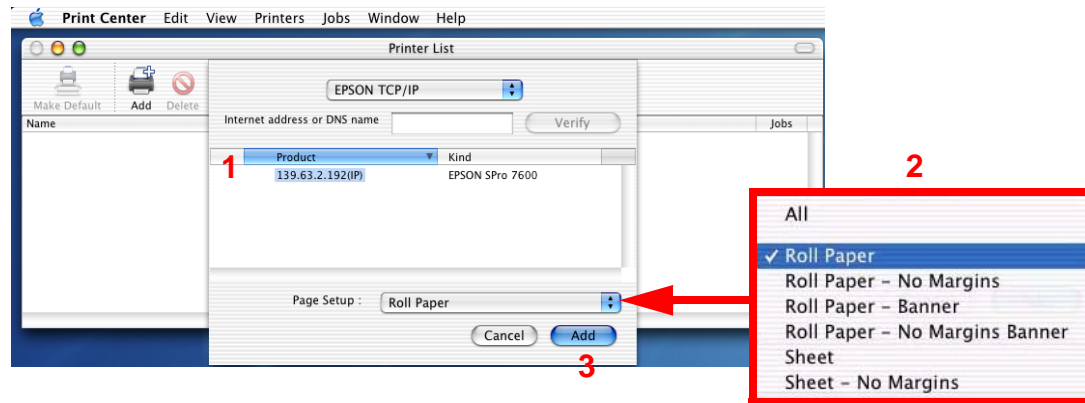


6. The printer and queues will be added to the Print Center Printer List:

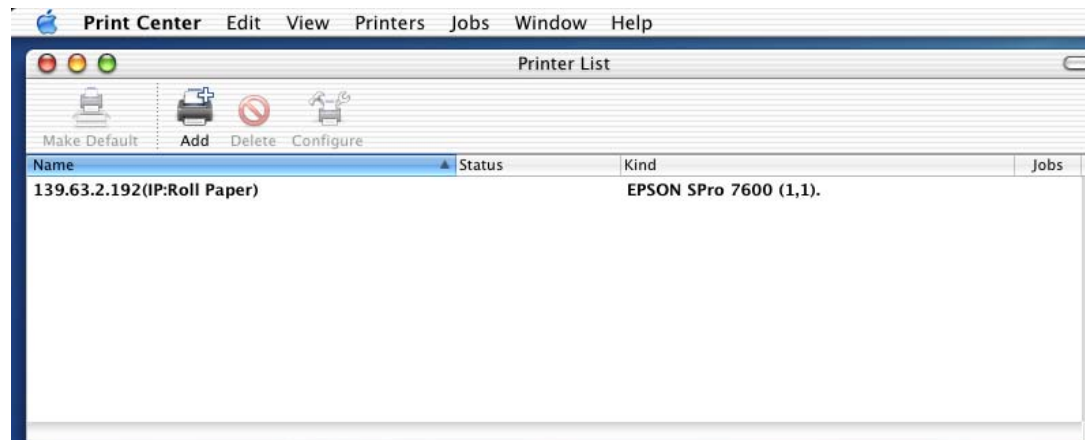


7. To add or remove information displayed about the printer go to the View Menu and select Columns then choose the information you would like to display:

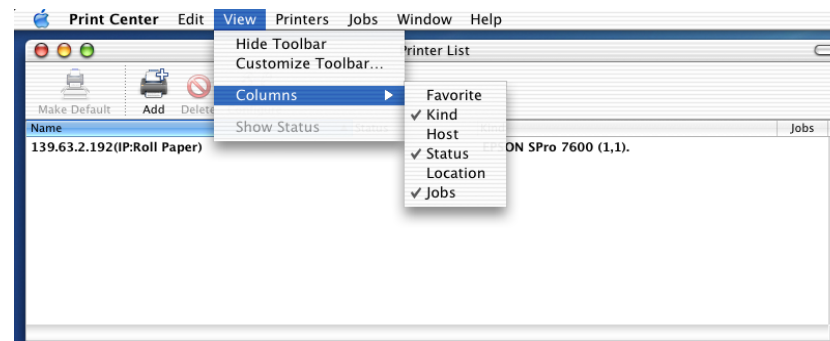


8. To make the printer the Default printer highlight the printer then go to the Printers Menu and select Make Default or click the Make Default button.

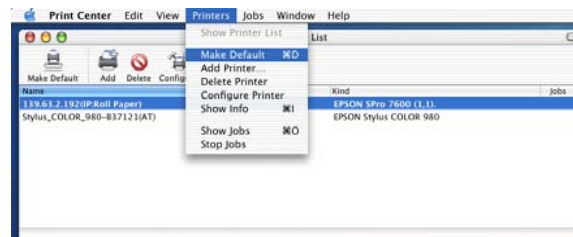

9. The Default printer will be highlighted in the Printer List:

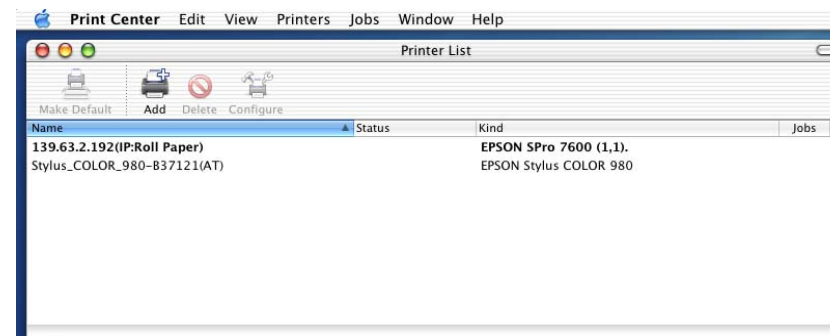


10. To view the Job Status of a printer double click on it in the Printer List to display its information and status:

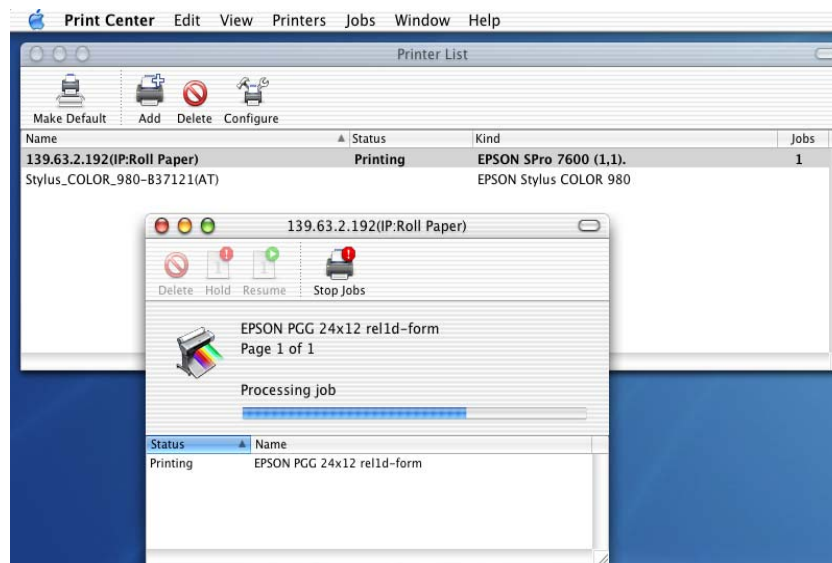


EPSON PRINTER UTILITY

1. You can access the Epson Printer Utility from the Print Center by:
 - 1.1 First selecting your printer from the Print Center Printer List.
 - 1.2 Next click Configure.
 - 1.3 Then from the new Printer List window select your printer and click OK.

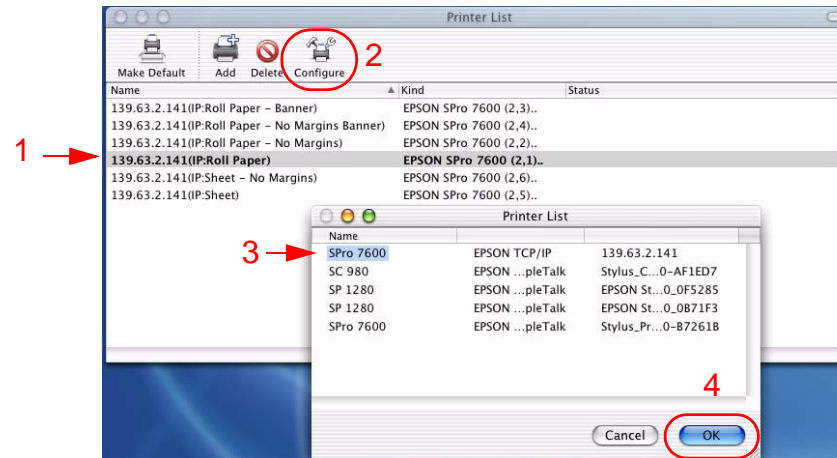


- 1.4 From the Epson Printer Utility you can Check the Status of Ink-Paper-and the printer itself, perform print head Nozzle Checks, Clean the print head, or perform Print Head Alignments.

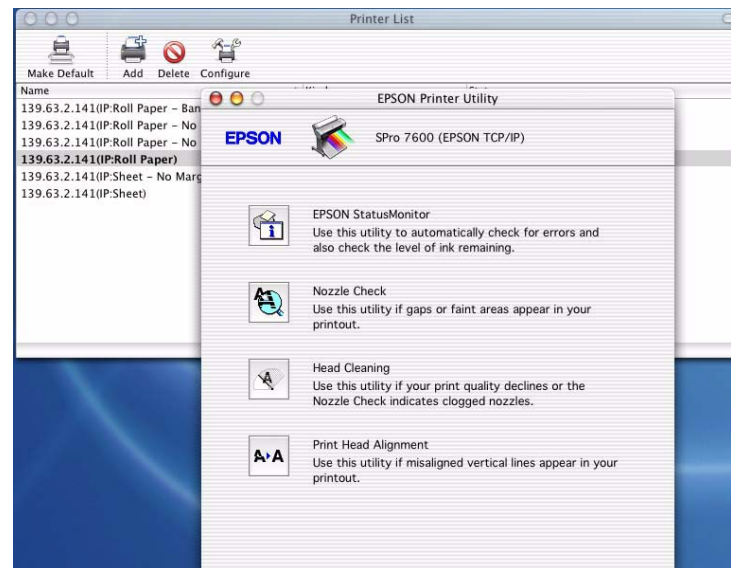


DRIVER REMOVAL

Before installing a New Driver you must first properly remove the existing Driver and all of its components.


1. Open the Epson Driver from any application and select print. Remove all user created “Presets” that were created for the printer you are removing. From the Presets drop down menu select the Preset (example: MYPRESET) then select Delete..

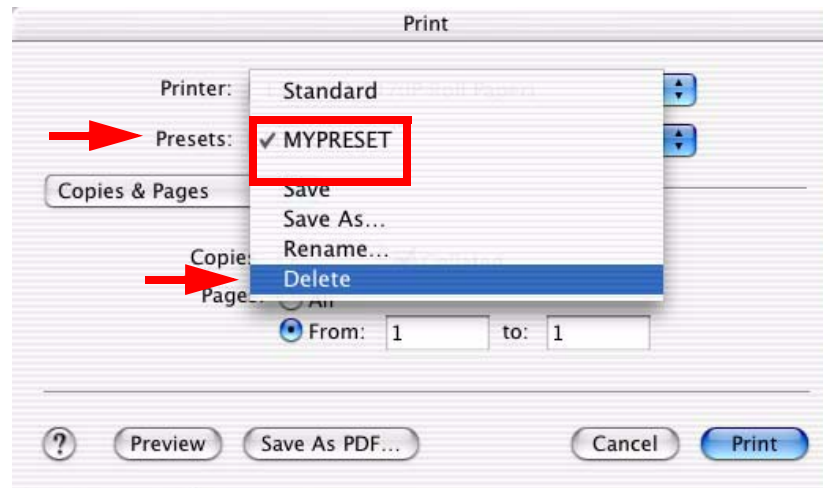

2. Next open the **Print Center** and remove all the printers queue entries for the printer you wish to un-install. Highlight the Queues and press the **Delete** button.

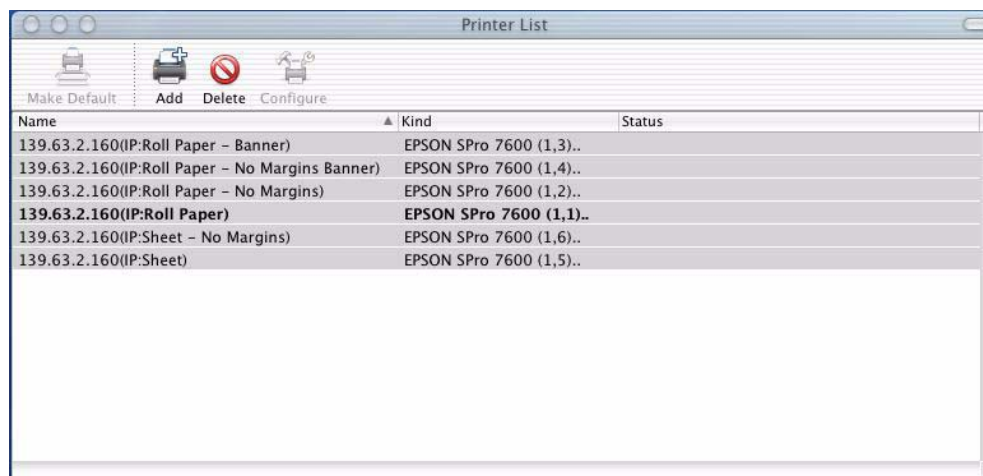

4.1.2 Drag the printers Preferences to the TRASH.

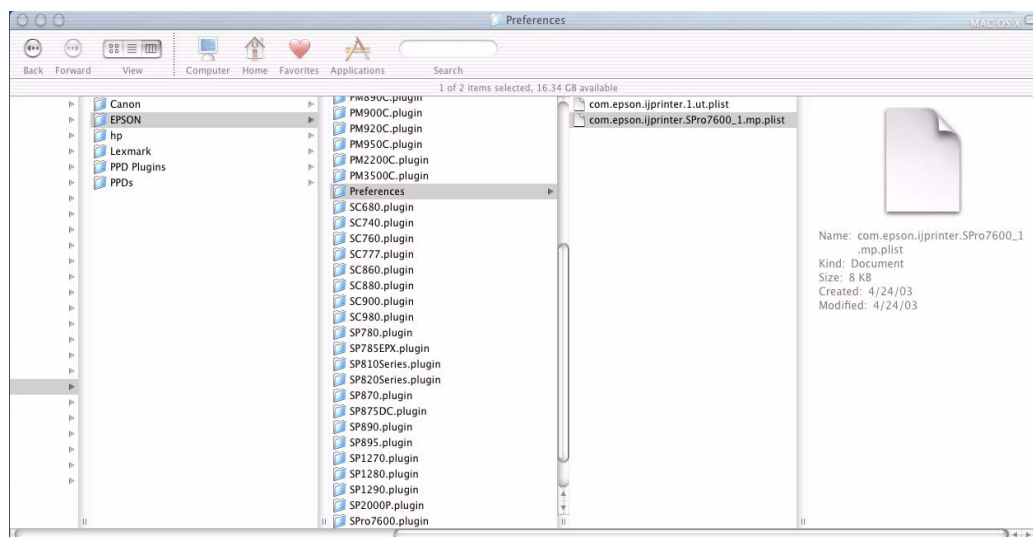


4.2 The second option is to drag the entire Epson folder to the Trash.



Dragging the entire Epson folder to the Trash Deletes ALL Epson Printers.

5. From the Receipts folder Drag the Printers Package information to the TRASH.

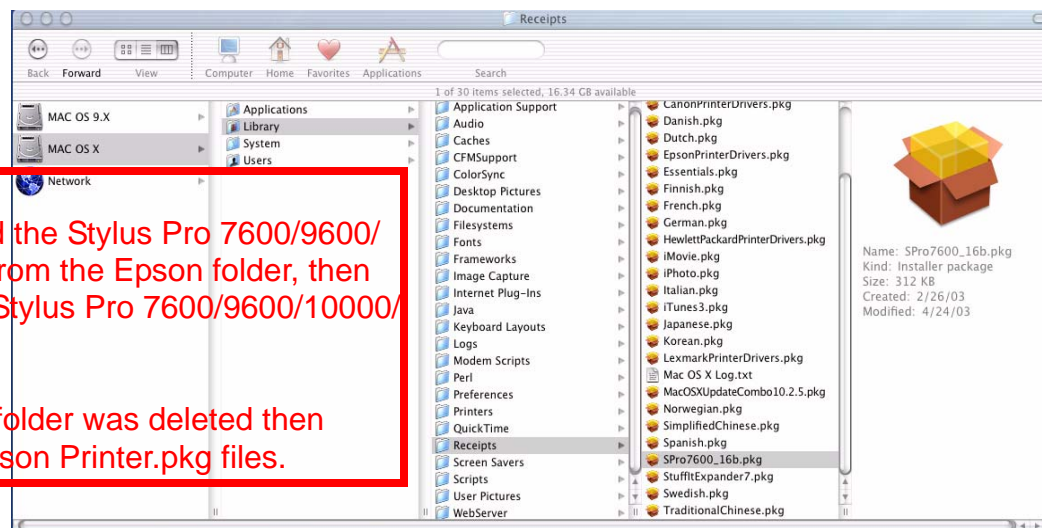

NOTE:

If you only removed the Stylus Pro 7600/9600/10000/10600 files from the Epson folder, then **ONLY** remove the Stylus Pro 7600/9600/10000/10600.pkg file.

If the entire Epson folder was deleted then remove ALL the Epson Printer.pkg files.

EPSON Product Support Bulletin

Date:	09/25/2002	Originator:	MS
PSB #:	PSB.2002.09.004	Authorization:	<i>MS</i>
Reference:	N/A	Total Pages:	
Product(s):	EPSON Stylus Pro 9000, 9500, 9600, 7000, 7500, 7600, 10000, 10600, 5000, 5500 and Stylus Color 3000 Printers		
Subject:	PostScript Printing Support for Mac OS X Native Mode		

This bulletin provides instructions for installing and configuring a Mac OS X Client with your existing EPSON hardware or software RIP. If your EPSON Professional Wide Format printer was bundled with one of the RIP packages listed below, or if you had purchased the RIP as an option, then you can configure a Mac OS X Client with OS Version 10.2 and above for PostScript printing by simply installing the appropriate RIP PPD.


- EFI RS 5000 LX Series – Stylus Pro 5000 printer
- EFI RS 5100 X2 Series - Stylus Pro 9000, 7000, 9500 and 7500 printers
- Fiery Spark Designer – Stylus Pro 5500 printer
- Fiery Spark Professional 1.0 – Stylus Pro 5500 and Stylus Pro 10000ARC/DYE printers
- Fiery Spark Professional 2.0 – Stylus Pro 9600UCM/7600UCM printers
- EPSON StylusRIP - Stylus Color 3000 and Stylus Pro 5000 printers

Installation Instructions:



Setup your existing RIP Server as per the instructions provided in the User's Guide that came with your RIP. To setup a Mac OS X Version 10.2 Client follow the instructions below. There are two ways you can add a PPD and configure your printer in OS X, **AppleTalk** or **IP Printing**.

AppleTalk Installation:



1. Open the **Print Center**, which can be found on your hard disk driver under **Applications - Utilities**

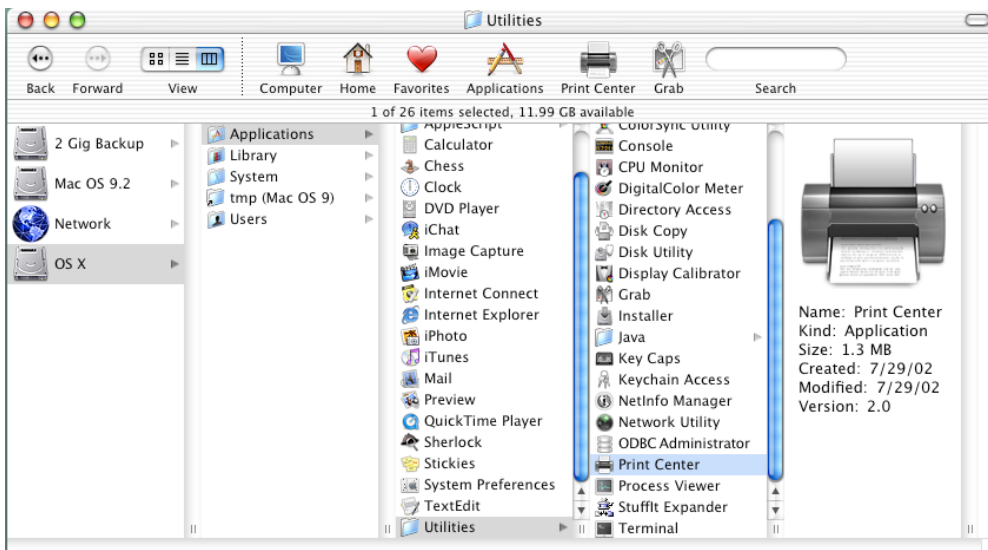



- Click on the **Add** button. Then select **AppleTalk** from the top sub-menu and your **AppleTalk** zone if applicable.

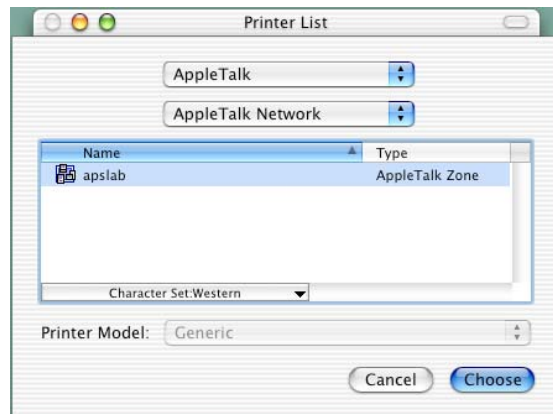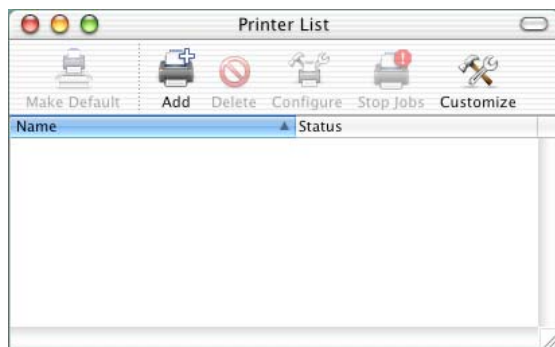

- The **Print Center** should scan the network and find all your devices. Select your printer from the list and click on the **Printer Model** sub-menu. Select **Other** to continue.

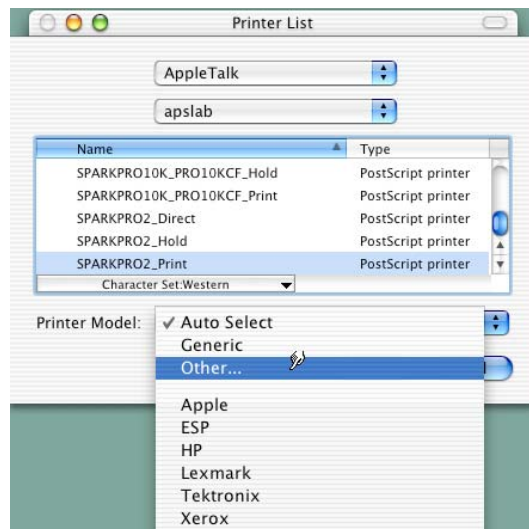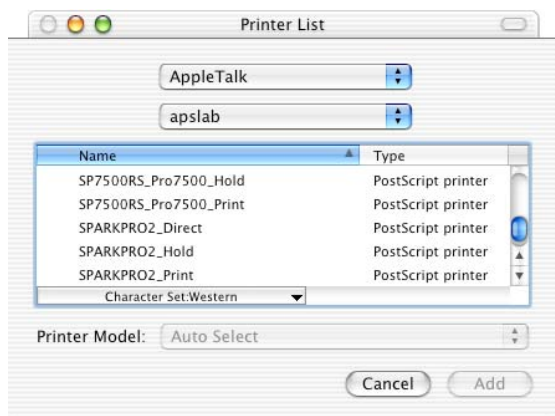


- Navigate to the location of your PPD file. After selecting the PPD file it should reflect the name of the printer under the **Printer Model** section. Click on the **Add** button.

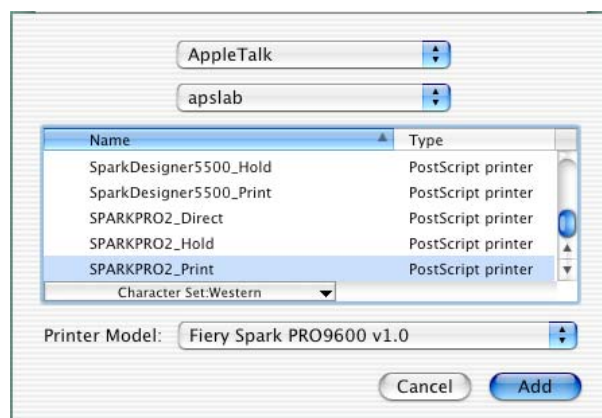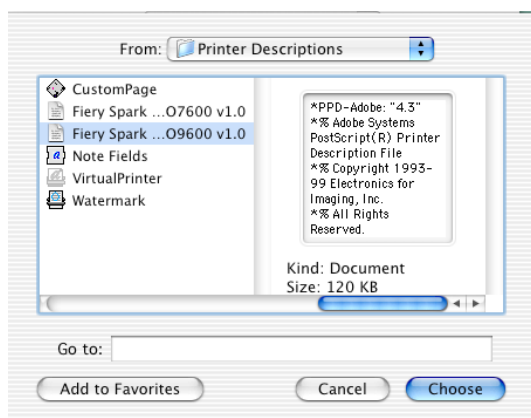



- Repeat the process to add your additional queues. Your Mac OS X Client should now be ready to print.

IP Printing Installation:


1. Open the **Print Center**, which can be found on your HDD under **Applications - Utilities**

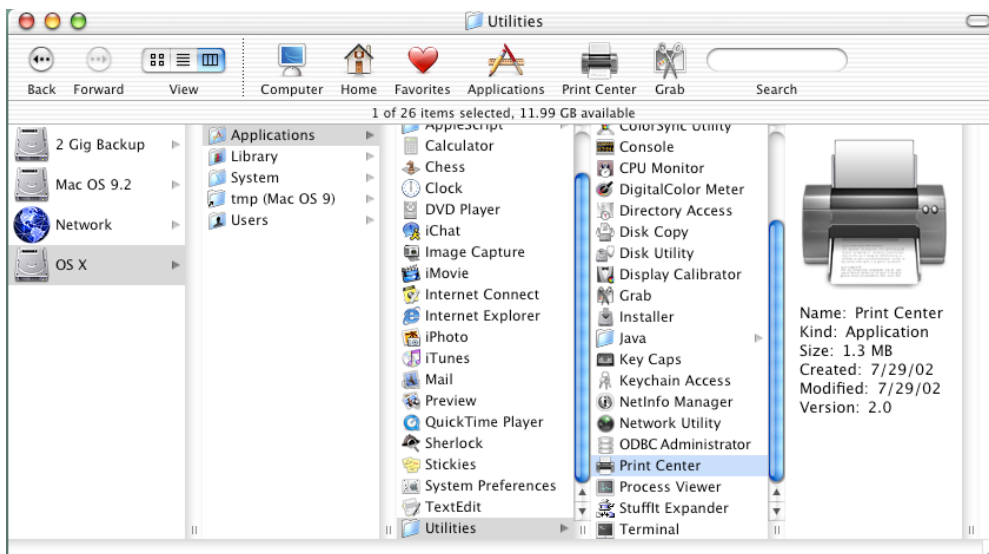



2. Click on the **Add** button and select **IP Printing** from the sub-menu.

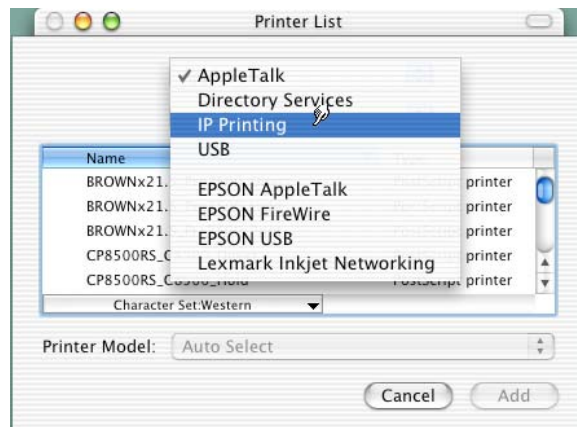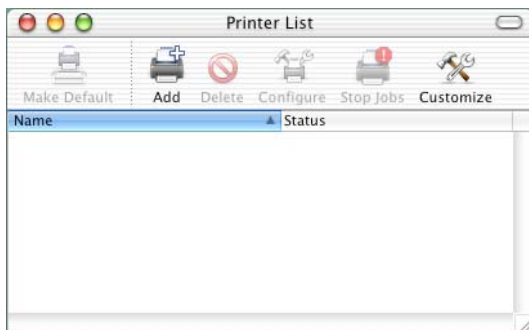


3. Enter the IP Address of the Postscript Server under **Printer's Address**. Uncheck the **Use default queue on server** and type in the queue you wish to add. Click on the **Printer Model** sub-menu and select **Other**.

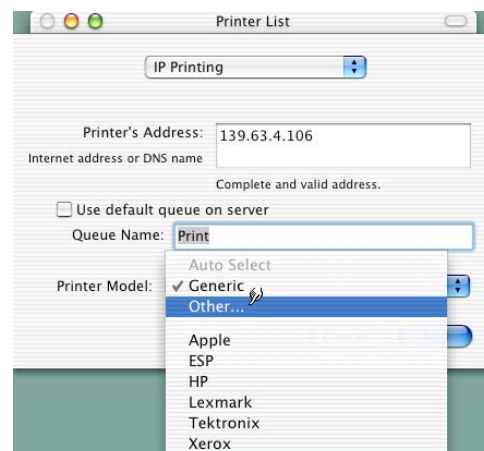

4. Navigate to the location of your PPD file. After selecting the PPD file it should reflect the name of the printer under the **Printer Model** section. Click on the **Add** button.

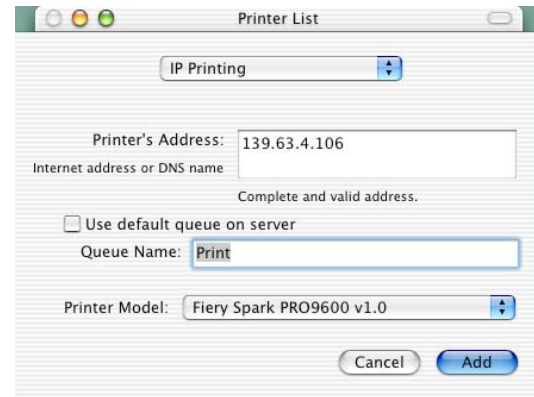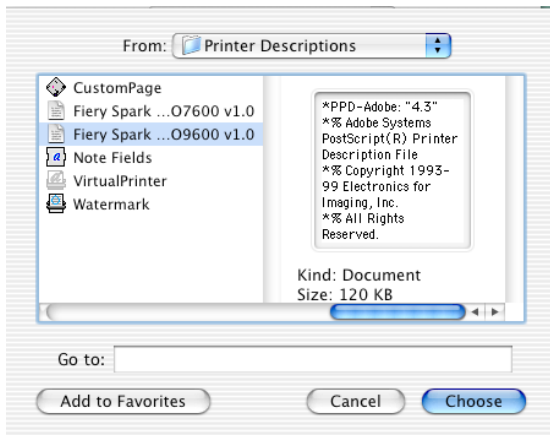


5. The Print Center should now show the Queue that you typed along with the IP address.

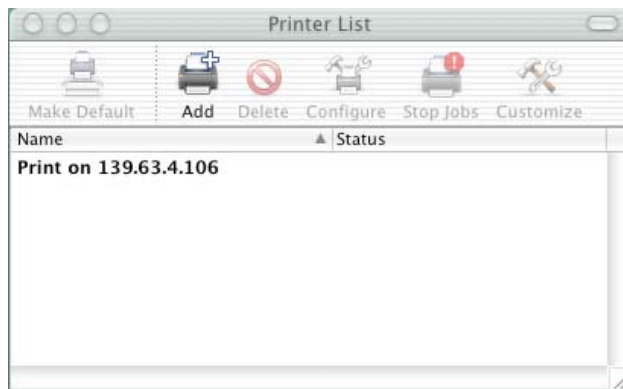

6. Repeat the process to add your additional queues. Your Mac OS X Client should now be ready to print.

Note: The StylusRIP does not have a separate folder on the CD to select the printer's PPD. In order to select the PPD it must be copied from another client's **Printer Description folder** as shown below (HDD - System folder - Extensions folder - Printer Description folder).

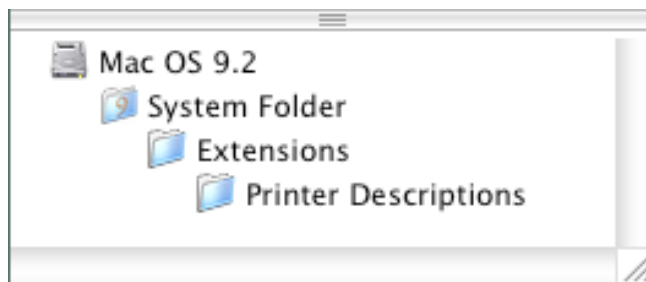

EPSON PRODUCT SUPPORT BULLETIN

Date: 10/22/2003

Originator:RS

Bulletin #: PSB.2002.09.002A

Authorization: 

Reference: NA

Total Pages: 7

Product: EPSON Stylus Pro 10600 UC (UltraChrome Only)

Subject: Printer Control Panel Paper Configuration

This bulletin was created to inform you of the use and functionality of the printer control panel Paper Configuration menu and options for the EPSON Stylus Pro 10600 UC Inkjet printer.

PURPOSE:

The EPSON Stylus Pro 10600 UC Printer control panel Paper Configuration menu allows the user to make ten custom paper configurations that override the standard printer driver or 3rd. party RIP paper configuration. The custom paper configuration also allows the user to use media other than EPSON genuine media or to customize Epson media settings. The settings you make using the printer control panel paper configuration can be saved and recalled as required by your work flow.



For best results familiarize yourself with all the information in this document prior to creating your first custom paper configuration. Have your test image ready and the paper loaded you will be creating a custom configuration for. Some of the configuration items may require you to repeat the adjustment with a different set of values until the best result is achieved. Until you become familiar with the effects of each configuration selection, you may want to adjust them one at a time. You may only need to adjust one or two of the configuration selections to obtain the best results for your media.



Remember when a Custom Paper Configuration is selected by a **Paper Number** of **1 - 10** on the printer control panel it overrides the paper settings from the Epson Driver or 3rd party RIP. To restore normal paper settings from the Epson Driver or 3rd party RIP set the **Paper Number** back to ***STANDARD**.



Printer Control Panel Paper Configuration

Epson always recommends performing a nozzle check prior to using the custom paper configuration to ensure that the printer is functioning properly in order to obtain the best possible image quality and results.


The EPSON Stylus Pro 10600 UC Printer control panel Paper Configuration menu contains the following features and functions:

1. **Paper Configuration Number** - ***Standard** with Custom **Paper Configuration 1 - 10**.
2. **Paper Thickness** - ***AUTO** with Custom Configuration **Range 1 - 17**.
3. **Cut Pressure** - ***100%** with Custom Configuration **Range 0% - 110%**.
4. **Cut Method** - ***3 Step** with Custom Configuration of **4 Step**.
5. **Paper Feed Adjustment** - ***0.00%** with Custom Configuration **Range -0.70% - +0.70%**.
6. **Drying Time** - ***0.00 Sec.** with Custom Configuration **Range 0.0 Sec. - 10.0Sec.**
7. **Suction** - ***Normal** with Custom Configuration **Range Weak and Weakest**.
8. **Print Adjustment** - ***5** with Custom Configuration **Range 1 - 9**.

** Denotes the default setting for the configuration item.*

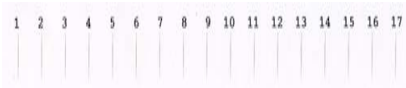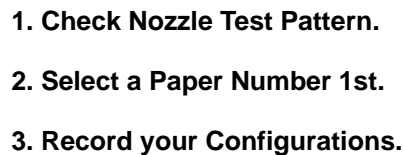

Choose the best overlapping pattern and enter its number for the **PATTERN** value.

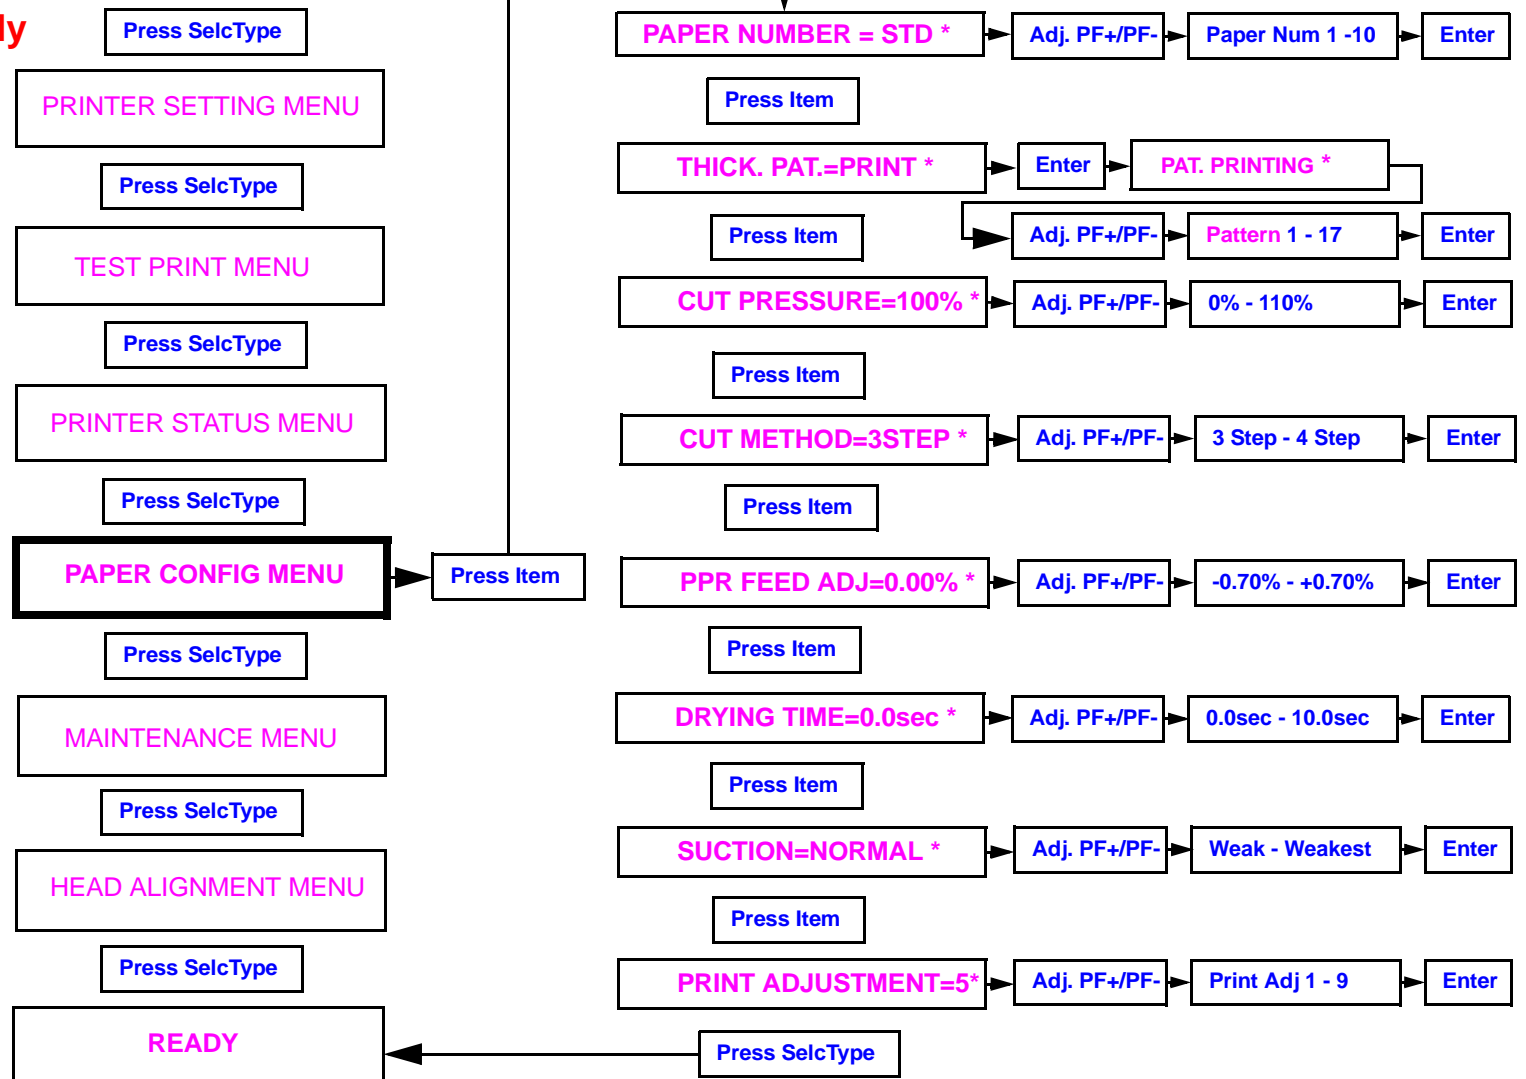

PAPER CIONFIGURATION DESCRIPTION


This section describes each of the Custom Paper Configuration choices and how they can be used. In most cases when the Epson driver and media are used all of these values are pre-configured and do not require a custom paper configuration. You will find the Custom Paper Configuration useful when using third party media and RIP's to obtain the best possible image quality.

1. Paper Configuration Number:

The default is ***Standard**. When you are creating a New Custom Paper Configuration and want to override the paper configuration from the Epson driver or 3Rd party RIP you must first select one of the ten custom paper configuration numbers (**Range: 1 - 10**) then press the **Enter** button to set and confirm your selection. By selecting a paper configuration number allows you to save, further modify and recall your specific custom paper configuration by its number. To use the ***Standard** default or anyone of the ten custom paper configurations after you have created them, simply enter the **Paper Configuration Paper Number** selection for your current media by using the **Paper Feed +/-** button to scroll the media number choices, press the **Enter** Button an ***** will appear to confirm your selection.

2. Paper Thickness:

The default is ***AUTO**. This configuration value allows you configure the medias thickness value dynamically by printing a test pattern of 17 vertical overlapping sets of lines and choosing which set of lines that overlaps the best. Press the **Enter** button when **THICK. PAT.=PRINT** is displayed on the LCD display. Press the **Enter** button then the display changes to **PAT. PRINTING**. The pattern that prints has 17 columns of vertical overlapping lines each is numbered. You choose which set of vertical lines that overlaps the best (Straightest Vertical Line) and use the **Paper Feed +/-** to enter the Custom Configuration value. (**Range 1 - 17**) then press the **Enter** button to confirm and save the value.

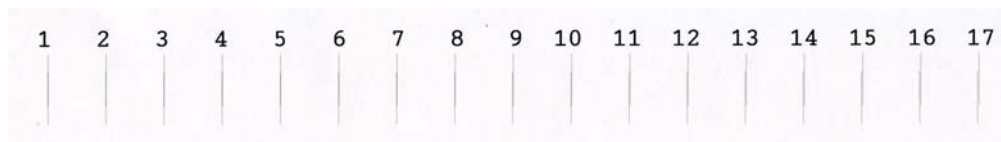

3. **Cut Pressure:**

The default is ***100%**. The Cut Pressure configuration setting is useful to insure good cuts with supported media and to allow cutting of thinner media without snagging or tearing it. (**Range 0% - 110%**). For thinner media try a value less than 100%. A dull or damaged cutter blade will cause improper cutting as well as cutting media that is not supported for the built in automatic cutter.

Media that is NOT supported by the built in automatic cutter includes:

Smooth Fine Art - Textured Fine Art - Canvas - Enhanced Matte Posterboard - Somerset Velvet Fine Art Paper - Backlight Film - Heavy Weight Polyester Banner - Adhesive Vinyl - DuPont Semi Gloss Proofing Paper and third party medias that are similar to those mentioned or paper media greater than 10mil thickness. Damage to the cutter blade will occur by using the built in Auto Cutter to cut these medias. Epson has a manual cutter option that can cut these medias.

4. **Cut Method:**

The Default is ***3 Step**. The Cut Method is useful for cutting thinner media to prevent snagging or tearing of the media during cutting. For thinner media try the Custom Configuration of **4 Step**. (**Range 3 Step or 4 Step**).

5. **Paper Feed Adjustment:**

The default is ***0.00%**. The Paper Feed Adjustment is very useful in removing Horizontal Banding using the standard Epson driver or a 3Rd party RIP and media. The horizontal banding will appear as thin light or dark lines that repeat at the same distance. Make sure a nozzle check is performed prior to making this adjustment as missing or deflected nozzles can also produce prints with horizontal banding. The banding this adjustment corrects is caused by the media not being feed far enough (**Dark Thin Lines**) or the media is being feed to far (**Light Thin Lines**). The distance between the horizontal banding depends on the print resolution. For example, the approximate distance between the lines for various resolutions are:

360dpi = 5mm, 720dpi = 3mm, 1440dpi = 1.8mm. To remove Dark Thin Lines the paper needs to feed further, try a value in the + direction. To remove Light Thin Lines the paper needs to feed less, try a value in the - direction. (**Range -0.70% - +0.70%**).

6. **Drying Time:**

The default is ***0.0 Sec**. Setting a Dry Time is useful if the printer pauses during a print waiting for more data to print from the computer. Ideally the print head of the printer should continue moving consistently from start to finish when printing an image. If the print head paused waiting for more data the ink it has already laid down dries, then when more data arrives the printing continues however the new wetter ink cannot blend with the already dried ink causing a **Wide Horizontal Band** in the image. One solution to a computer that cannot keep the printer running consistently is to add a Dry Time or delay between each print head pass this will cause each layer of ink the same amount of time to dry and eliminate the wide horizontal bands in the images. The other solution is a faster computer. (**Range 0.0 Sec. - 10.0Sec**).

7. **Suction:**

The default is ***Normal**. The normal setting is the best selection for most media however if you are using thin or very thin media you may want to try the optional settings of Weak or Weakest. (**Range Weak and Weakest**).

8. **Print Adjustment:**

The default is ***5**. This selection allows you to adjust the MicroWeave pattern. MicroWeave is the pattern of dots the print head lays down. By adjusting this value a more uniform image can be produced and can also reduce or remove minor banding. (**Range 1 - 9**).



Keep a record of your custom paper configurations that includes the paper number, media type and your custom setting values.

ISSUES AND SOLUTIONS

Below are some common issues you could experience and suggestions on how they may be corrected:

- **General Print Quality:** Head Cleaning, Paper Thickness Adj., Print Adj.
- **Paper Cutting:** Cut Pressure Adj., Cut Method Adj., Suction Adj.
- **Vertical Banding:** Head Cleaning, Paper Thickness Adj., Suction Adj., Print Adj., or try reducing the ink saturation in the driver or RIP.
- **Horizontal Banding:** (*Repeating evenly spaced Thin Light or Dark lines*): Head Cleaning, Paper Thickness Adj., Paper Feed Adj., Print Adj.
- **Horizontal Banding:** (*Wide usually darker bands*): Head Cleaning, Paper Thickness Adj., Dry Time Adj., Print Adj.
- **Bi-Directional printing mis-registration:** Head Cleaning, Paper Thickness Adj., Print Adj.